
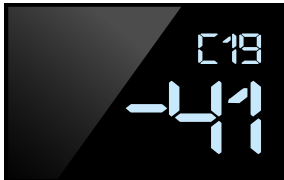














SOFTWARE UPDATE CHECKLIST









NEW £ 5 AND CHF 50 BANKNOTE COUNTERFEIT DETECTORS

Device	Software version	Is this number displayed on your device during start-up?	
		Yes	No
Safescan 155i 	C19-41 	No Software update needed	Software update needed, download at www.safescan.com
Safescan 155-S 	C19-41 	No Software update needed	Software update needed, download at www.safescan.com
Safescan 165i 	C20-41 	No Software update needed	Software update needed, download at www.safescan.com
Safescan 165-S 	C20-51 	No Software update needed	Software update needed, download at www.safescan.com

NEW £ 5 AND CHF 50 BANKNOTE BANKNOTE COUNTERS

Device	Software version	Is this number displayed on your device during start-up?	
		Yes	No
Safescan 2660 	C41-41 / C41-51 <div>C41-41</div> <div>Safescan 2660</div> <div>Welcome</div> <div>Self test</div> <div>C41-51</div> <div>Safescan 2660</div> <div>Welcome</div> <div>Self test</div>	No Software update needed	Software update needed, download at www.safescan.com
Safescan 2665 	C42-41 / C42-51 <div>C42-41</div> <div>Safescan 2665</div> <div>Welcome</div> <div>Self test</div> <div>C42-51</div> <div>Safescan 2665</div> <div>Welcome</div> <div>Self test</div>	No Software update needed	Software update needed, download at www.safescan.com
Safescan 2680 	C43-41 <div>C43-41</div> <div>Safescan 2680</div> <div>Welcome</div> <div>Self test</div>	No Software update needed	Software update needed, download at www.safescan.com
Safescan 2685 	C44-41 / C44-51 <div>C44-41</div> <div>Safescan 2685</div> <div>Welcome</div> <div>Self test</div> <div>C44-51</div> <div>Safescan 2685</div> <div>Welcome</div> <div>Self test</div>	No Software update needed	Software update needed, download at www.safescan.com

NEW £ 5 AND CHF 50 BANKNOTE BANKNOTE COUNTERS

Device	Software version	Is this number displayed on your device during start-up?	
		Yes	No
Safescan 2660-S 	C41-61 	No Software update needed	Software update needed, download at www.safescan.com
Safescan 2665-S 	C42-61 	No Software update needed	Software update needed, download at www.safescan.com
Safescan 2680-S 	C43-61 	No Software update needed	Software update needed, download at www.safescan.com
Safescan 2685-S 	C44-61 	No Software update needed	Software update needed, download at www.safescan.com

IMPORTANT:

Please check the partnumber on the product label located at the rear of the device, and ensure you download the correct software version for your specific model !

