



QUICK INSTALLATION GUIDE

ENGLISH | NEDERLANDS | DEUTSCH | FRANÇAIS | ESPAÑOL | ITALIANO | PORTUGUÊS
POLSKI | ČESKY | SLOVENČINA | MAGYAR

SAFESCAN 6185

MONEY COUNTING SCALE

INTRODUCTION

This Quick Install Guide helps you to get started with your Safescan 6185 and describes the basic functions for counting coins and banknotes. For more detailed operating instructions of the Safescan 6185 please see the user manual, available to download at www.safescan.com. As the Safescan 6185 has many advanced counting and weighing functions which are not all described in this Quick Install Guide, we strongly recommend you to download and save a copy of the user manual on your computer for future reference.



 
To download the full user manual from www.safescan.com, please go to the Safescan 6185 product page in the "Online Shop" and select the tab "Downloads", or go to the Customer Service section, select 'Downloads' in the "Service & Contact" menu and use the product finder to select the downloads for the Safescan 6185.

PACKAGE CONTENTS


The retail box contains the following items:

- Safescan 6185 money counting scale
- Power adapter (12V/1A, 12 Watt)
- Money platform
- Coin cup
- USB pc connection cable (USB-A to Micro USB)
- USB printer cable (USB-B to Micro USB)
- Quick Install Guide


PRODUCT

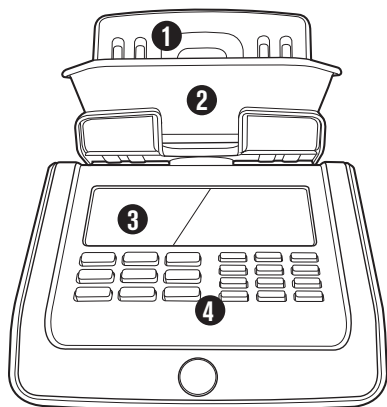

FRONT

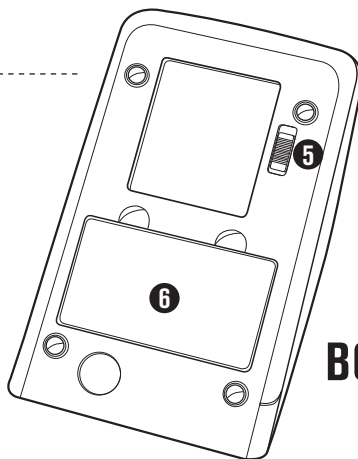 

BOTTOM

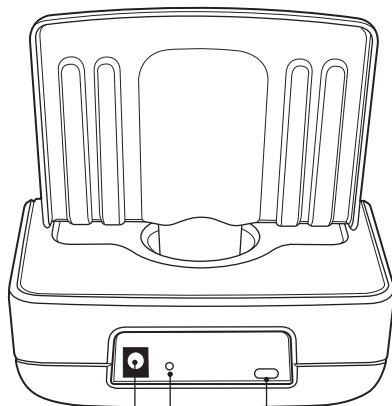 


BACK


1. Money platform
2. Coin cup
3. Display
4. Function buttons and numeric keypad
5. Transport lock
6. Battery compartment
7. Power connector
8. Reset button
9. USB port for connection to PC or printer

INSTALLING YOUR SAFESCAN 6185 (FIRST USE)

 
1. Unlock the transport lock.

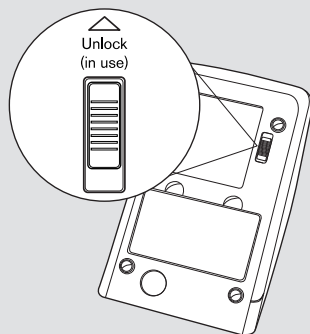

 
2. Place the device on a flat and stable surface.

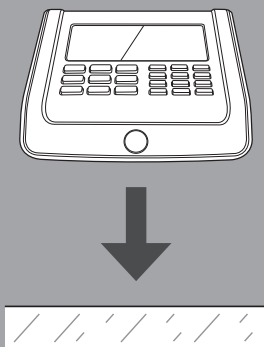

 
3. Remove the protective foil.

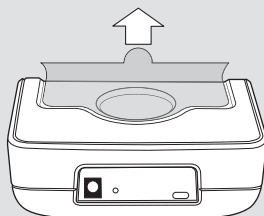

 4. Place the money platform onto the device.

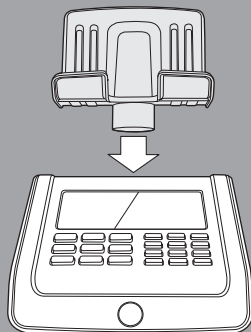

 5. Connect the power adapter to the device and the mains socket.

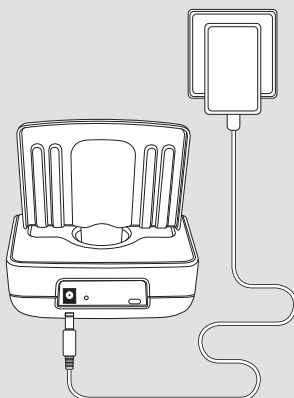

6. Switch on the device by pressing the power **ON/OFF** button.



PLEASE NOTE: WHEN SWITCHING ON THE POWER, **DO NOT PLACE THE COIN CUP ON THE PLATFORM YET.**

START-UP SCREEN





Software version and Currency weight table version numbers may change due to continuous improvements, added features or currency updates. Check www.safescan.com regularly for availability of new software updates.

SET REGION



Select the region where you will be using your Safescan 6185.

 
Use the   buttons to toggle between

“EUROPE”, “UK”, “USA”, “S-E ASIA” and “AUSTRALIA”.

Press  to confirm.



SELECT CURRENCY

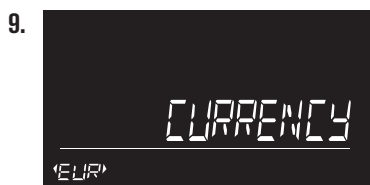


Select your default currency with the   buttons.

Press  to confirm.




The 6185 will reboot. After reboot, the device will start in counting mode, showing the first coin denomination to be counted.

 DISPLAY AND BUTTONS

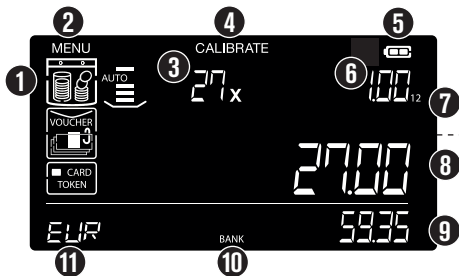

 1. Cash value items (coins, banknotes and other count items)
2. Settings menu
3. Quantity
4. Calibration menu
5. Battery level indicator
6. Denomination
7. Denomination version
8. Current value
9. Total value
10. Active bank
11. Currency

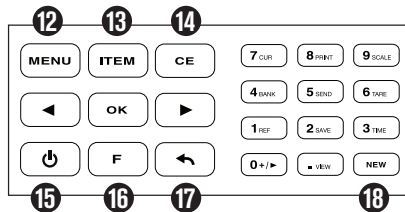

12. Open settings menu
13. Switch between coins / banknotes / other count items
14. Clear entry
15. Power ON/OFF
16. Function (+ numeric key)
17. Back
18. New count

FUNCTION KEY (SECONDARY FUNCTION OF NUMERIC KEYS)

By pressing **F** followed by a numeric key, the secondary function of the numeric keys can be selected. These functions are:

- | | |
|---|---|
| 1 REF Set a count reference | 7 CUR Select a currency |
| 2 SAVE Save the current counting results in memory | 8 PRINT Print the current count results |
| 3 TIME Show the time and date (for 3 seconds) | 9 SCALE Go to weighing mode |
| 4 BANK Set a bank value (the starting amount of cash in cash drawer) | VIEW View the stored counting results |
| 5 SEND None (secondary function not available) | 0 +/- Switch Auto ADD / Auto NEXT on/off |
| 6 TARE Tare the current weight on the platform | |

For a detailed explanation of the functions keys please see the full user manual.

INTUITIVE USER INTERFACE

The intuitive user interface of the 6185 will guide you through the necessary selection and/or counting procedures.

When a certain action or input is required from the user, 2 arrows will start blinking at the corresponding field in the display. Simply navigate with the **◀ ▶** buttons to the desired selection and press **OK** to confirm the selection.





COUNTING INSTRUCTIONS

 
Note: Count one denomination at a time. For efficient counting, please make sure that coins or banknotes have been sorted beforehand. Always use the coin cup when counting coins.

COUNTING COINS

1. Place the coins in the supplied coin cup and place the cup onto the platform.
2. The quantity and value of the coins will be displayed. When the device has finished the count, a 'beep' will sound.
3. Take the cup from the platform. The counting result will be added to the total. A double 'beep' will sound to confirm.

The 6185 will automatically switch to the next coin denomination. Alternatively, use the   buttons to select a denomination.


After the highest value coin denomination has been counted, the 6185 will automatically switch to the lowest value banknote denomination.

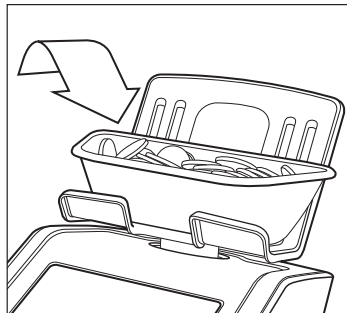

COUNTING BANKNOTES

1. Place the banknotes in small batches on the money platform. A 'beep' will sound to confirm the count.
2. Leave the first stack on the money platform and add the next stack of the same denomination.
3. Continue adding stacks until all banknotes of the selected denomination have been counted.
4. Remove all banknotes at once from the platform. A 'beep' will sound to confirm and their value will be added to the total.

 The 6185 will automatically switch to the next banknote denomination.

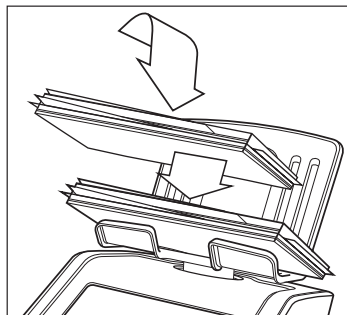

5. When too many banknotes have been placed on the platform, or an illogical weight has been detected, the 6185 may not be able to determine the correct amount of banknotes on the platform. The following messages may appear:
"REMOVE SOME": remove a few banknotes from the platform until the 6185 has been able to determine the correct amount of banknotes. Continue to add more banknotes on the platform in small batches.
"REMOVE X - Y PCS": remove as many banknotes from the platform as suggested until the 6185 has been able to determine the correct amount of banknotes. Continue to add more banknotes on the platform in small batches.




Old and new versions of EURO banknotes do not have to be separated before counting

COUNTING OTHER CASH VALUE ITEMS

The Safescan 6185 can also be configured to count other cash value items such as cheque values, payment card values, coin rolls, bundled banknotes and many other items. Please refer to the full user manual for more information.



ENDING A COUNT

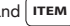VIEW CURRENT COUNT RESULTS



Use the   and  buttons to view the count results per item.

SAVE COUNT RESULTS

The 6185 can store up to 30 counts in its memory.

Press  followed by . The 6185 will store the results in its memory and will display the memory position in which the results have been saved. After 2 seconds the device will return to count mode.




PRINT COUNT RESULTS ON THE OPTIONAL SAFESCAN TP-230 PRINTER

Press  followed by  to print the currently active count results.

DOWNLOAD COUNT RESULTS TO THE OPTIONAL SAFESCAN MONEY COUNTING SOFTWARE

Run the Money Counting Software on your PC and select Report -> Count Data, or click on the Count Data icon to download the count data from the 6185 to the software.

STARTING A NEW COUNT

1. Press  on the keypad to start a new count. **NEW COUNT** will blink on the display.
2. Press  to confirm and start the new count or press  to return to the active count.

SPECIFICATIONS

Features

Money Counting Scale for counting coins, banknotes, cheque values, payment card values, vouchers, tokens and free weigh items.

Can also be used as precision weighing scale (note: weighing function is not an "approved legal for trade" function).

Currencies

EUR, GBP, USD, AUD, CHF, PLN, HUF, BGN, CZK, RON, SEK, NOK, DKK

Dimensions (LxWxH)

24.5 x 15.1 x 15.4cm

Display

3.3 inch high contrast LCD

Interface

Micro USB

Power requirements

Power supply 12V/1A

Power consumption

Max. 2.4W in operating mode (no battery charging)

Max. 12W in operating mode (including battery charging)

Max 36mW in stand by/idle mode

Operating temperature

0 - 40°C

Storage temperature

-25 ~ 55°C

Maximum load capacity

3.5kg

Maximum precision

0.1g

Net Weight

1.2kg

Certification

CE, RoHS

OPTIONAL

Rechargeable battery

Safescan LB-205 Li-Polymer battery

Thermal receipt printer

Safescan TP-230

Money Counting Software

Safescan MCS

Weighable coin cup set

Safescan 4141CC, for use with Safescan LD/SD/HD-4141 cash drawer - 33.5g cup weight

Safescan 4617CC, for use with Safescan SD-4617S cash drawer - 33.5g cup weight

SUPPORT

ANY QUESTIONS? NEED TECHNICAL ASSISTANCE?

Please check the full user manual of the Safescan 6185, available at www.safescan.com first. It contains extensive operating instructions and a full explanation of all advanced counting features of the 6185 as well as a troubleshooting guide.

Our support team is available by phone during office hours (GMT +1 timezone) or by e-mail to answer any question you may have regarding the use of your Safescan device. See www.safescan.com for details.

When calling or e-mailing our support center, always make sure you have the following information at hand: model number, partnumber, serial number (see product sticker at the bottom of the device), software version number, date of purchase.

SAFESCAN® is a registered trademark of Solid Control Holding B.V.

No part of this manual may be reproduced in any form, by print, copy or in any other way without prior written permission of Solid Control Holding B.V. Solid Control Holding B.V. reserves all intellectual and industrial property rights such as any and all of their patent, trademark, design, manufacturing, reproduction, use and sales rights. All information in this manual is subject to change without prior notice. Solid Control Holding B.V. is not liable and/or responsible in any way for the information provided in this manual.

www.safescan.com
info@safescan.com