

Cash Drawer Accessories Overview



Accessories Overview

Safescan LD-3336

Safescan LD-4141

Safescan SD-4141

Safescan SD-4617S

Safescan HD-4141S

Safescan HD-4646S

USB Cash Drawer Trigger
USB-Kassenladenöffner
Conector USB
Déclencheur USB
Controller USB per cassetti
USB kassaladetrigger

Safescan UC-100



Safescan UC-100



Safescan UC-100



Safescan UC-100



Safescan UC-100



Safescan UC-100



Mounting Bracket
Befestigungsleiste
Soporte de fijación
Support de fixation
Staffa di montaggio
Montagebeugel

Safescan 4141B



Safescan 4141B



Safescan 4141B



Coin Cup Set
Münzbecher-Set
Juego de tazas
Jeu de coupelles
Set vaschette per monete
Muntbakjes set

Safescan 4141CC



Safescan 4141CC



Safescan 4617CC



Adjustable Tray
Einsatz Kassenschublade
Gaveta para cajón
Bac amovible
Cassetto per cassa
Aanpasbare inzetbak

Safescan 4141T1 / 4141T2



Safescan 4617T



Safescan 4646T



Lockable Lid
Abschließbarer Deckel
Tapa con llave
Couvercle verrouillable
Coperchio bloccabile
Afsluitbare deksel

Safescan 4141L



Safescan 4617L

