

Cash Drawer Accessories Overview

Accessories Overview



Safescan LD-3336



Safescan LD-4141



Safescan SD-3540



Safescan SD-4141



Safescan SD-4617S



Safescan HD-4141S



Safescan HD-4646S

USB Cash Drawer Trigger
USB-Kassenladenöffner
Conector USB
Déclencheur USB
Controller USB per cassetti
USB kassalade-trigger

Safescan UC-100



Safescan UC-100



Safescan UC-100



Safescan UC-100



Safescan UC-100



Safescan UC-100



Safescan UC-100



Mounting Bracket
Befestigungsleiste
Soporte de fijación
Support de fixation
Staffa di montaggio
Montagebeugel

Safescan 4141B



Safescan 4141B




Safescan 4141B



Coin Cup Set
Münzbecher-Set
Juego de tazas
Jeu de coupelles
Set vaschette per monete
Muntbakjes set

 
Safescan 4141CC

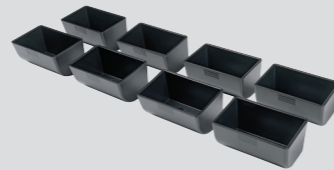

Safescan 4141CC



 Safescan 4617CC

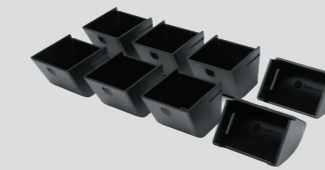

Adjustable Tray
Einsatz Kassenschublade
Gaveta para cajón
Bac amovibile
Cassetto per cassa
Aanpasbare inzetbak


Safescan 3540T



Safescan 4141T1 / 4141T2



 Safescan 4617T

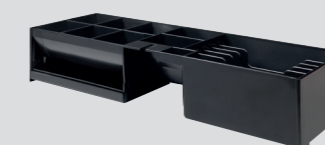

Safescan 4646T



Lockable Lid
Abschließbarer Deckel
Tapa con llave
Couvercle verrouillable
Coperchio bloccabile
Afsluitbare deksel

Safescan 3540L



Safescan 4141L



Safescan 4617L

