



4141T2 CASH DRAWER TRAY

SPEED UP SHIFT CHANGES AND CASH COUNTING

Buy a spare 4141T2 cash tray and save time on both ends of a shift change. Simply lift the whole 4141T2 out of the cash drawer and slip in the new one, pre-stocked with the desired coins and banknotes to start a new shift. Take the old one to your secure area for easy counting, then prepare it for the next shift and lock it in your safe. Voilà! Shift changes couldn't be more efficient.

- 6 adjustable banknote compartments
- Robust metal money clips
- Removable tray with 8 adjustable coin compartments
- Media slot for separating large denominations
- Suitable for Safescan SD-4141 and HD-4141S



Cash Drawer tray for Safescan SD-4141 and HD-4141S



Robust metal money clips



Removable and adjustable tray for 8 different coins

TECHNICAL SPECIFICATIONS

- Material	Robust metal construction
- Inner tray	Removable tray with 8 adjustable coin compartments
- Note compartments	6 adjustable banknote compartments
	Robust metal money clips
- Security lock	Media slot for separating large denominations
- Weight product	1.2 kg
- Dimensions product (lxwxh)	35.8 x 32.8 x 6.4 cm
- Dimensions retailbox (lxwxh)	40.2 x 38.2 x 11.5 cm
- Certifications / compliancies	CE, RoHS

PACKAGE CONTENTS

- Safescan 4141T2

WARRANTY

- 1 year

