



MANUAL

ENGLISH | NEDERLANDS | DEUTSCH | FRANÇAIS | ESPAÑOL | ITALIANO | PORTUGUÊS
POLSKI | ČESKY | SZLOVÁK | MAGYAR

SAFESCAN TA-8000 Series

TIME ATTENDANCE SYSTEM

TABLE OF CONTENTS

INTRODUCTION AND DIRECTIONS FOR USE

1. BASIC INSTALLATION AND OPERATION

1.1	Package contents	3
1.2	Wallmount installation	4
1.3	Terminal - description of the keys	5
1.4	Fingerprint placement	6
1.5	Installing the terminal in your network	6
1.6	LAN connection	7
1.7	WiFi connection	8
1.8	DHCP: pros and cons	8
1.9	Setting up an administrator user (super admin)	8
1.10	Registering a fingerprint	9
1.11	Registering an RFID card or key fob	9
1.12	Setting a password	10
1.13	Date and time settings	10
1.14	Enrolling users (normal user)	11
1.15	Clocking in / clocking out	12
1.16	Retrieving user and clocking data using a USB stick	12
1.17	Uploading user data to the terminal	13
1.18	Checking clocking data on the terminal	13

3. DESCRIPTION OF ALL FUNCTIONS AND MENU ITEMS

3.1	User management	29
3.2	User Role	29
3.3	Communication	29
3.4	System	30
3.5	Personalize	31
3.6	Data management	31
3.7	Access Control	32
3.8	USB Manager	32
3.9	Attendance search	32
3.10	Short Message	32
3.11	Work Code	33
3.12	Autotest	33
3.13	System Info	33
3.14	Use of biometric data	33

APPENDIX

Door access control schematics	34
--------------------------------	----

2. ADVANCED USAGE SCENARIOS


2.1	User Management	14
2.2	Edit users	14
2.3	Delete users	15
2.4	Expiration Rule	15
2.5	Expiration Rule options	15
2.6	Using work codes	16
2.7	Daylight saving time	18
2.8	Custom user roles	21
2.9	Short Message Service	22
2.10	Customise the function keys	23
2.11	Punch State values	23
2.12	Menu shortcuts	24
2.13	Access control	25
2.14	Holidays	27
2.15	Link between users, access groups time schedules and verification modes	27
2.16	Duress Options	28

INTRODUCTION AND DIRECTIONS FOR USE

Thank you for purchasing the Safescan TA-8000 series Time Attendance terminal; a complete solution for efficient time registration. Before starting to install and use the TA terminal, we recommend that you carefully read this user manual and keep it at hand for future reference. The user manual describes the basic set-up of the device, the advanced settings and usage scenarios as well as details of each menu item of the device. Please also refer to the Quick Install Guide which is included in the retail box of your TA terminal.

1. BASIC INSTALLATION AND OPERATION

1.1 PACKAGE CONTENTS

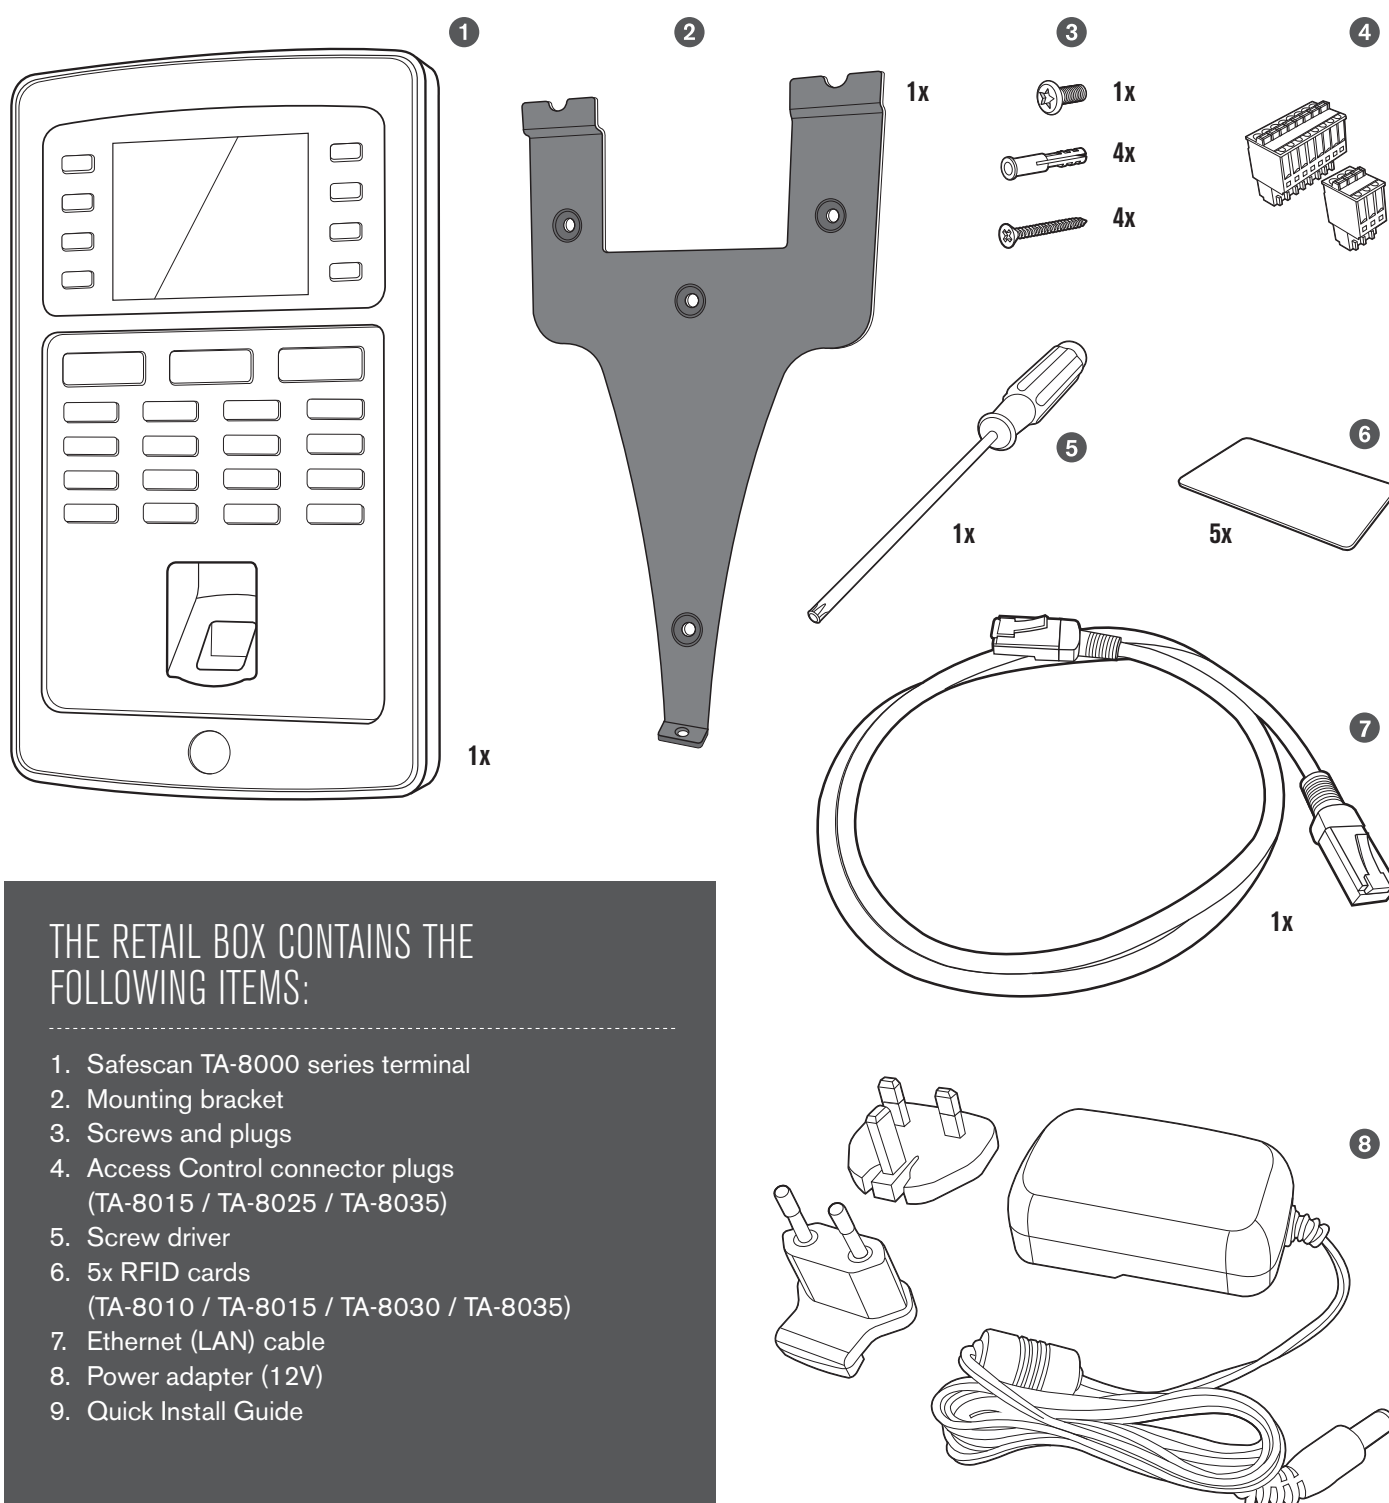


THE RETAIL BOX CONTAINS THE FOLLOWING ITEMS:


1. Safescan TA-8000 series terminal
2. Mounting bracket
3. Screws and plugs
4. Access Control connector plugs (TA-8015 / TA-8025 / TA-8035)
5. Screw driver
6. 5x RFID cards (TA-8010 / TA-8015 / TA-8030 / TA-8035)
7. Ethernet (LAN) cable
8. Power adapter (12V)
9. Quick Install Guide

1.2 WALLMOUNT INSTALLATION


1. Connect the power adapter and Ethernet (LAN) cable* to the terminal. Do not connect the power adapter yet to the mains.

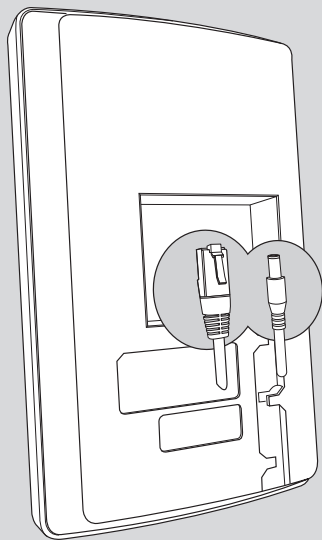


2. Drill 4 holes (Ø 6mm) in the wall on the exact position where you want to install the TA terminal. Use the mounting bracket as a template to determine the exact position of the holes.

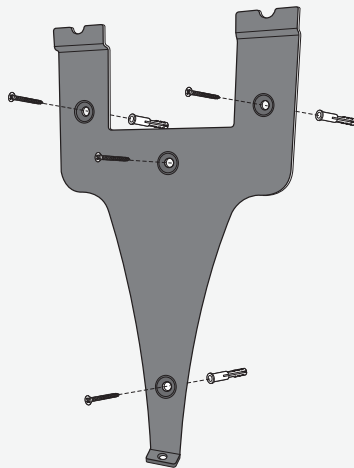


3. Slide the terminal on the bracket until it fixes itself to the bracket.

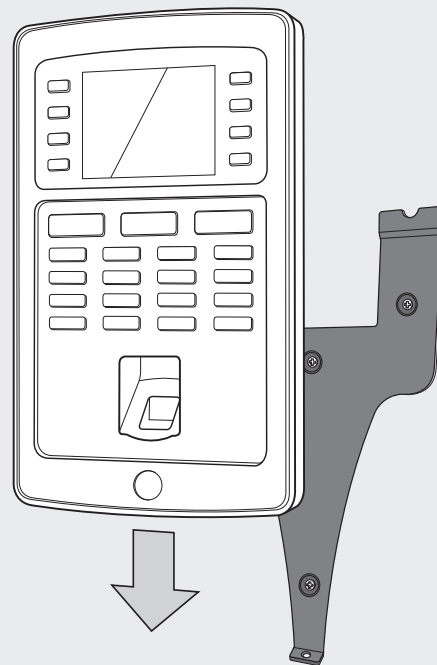

4. Secure the terminal by fixing the screw at the bottom.

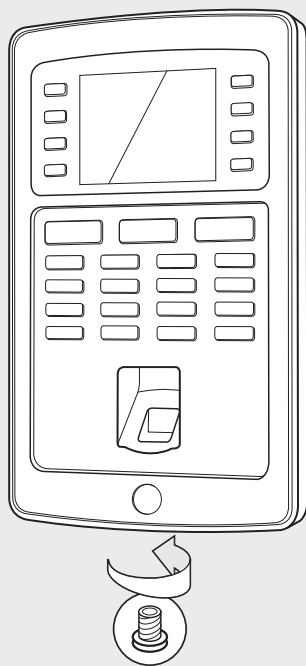

5. Plug the power adapter to the mains outlet, the terminal will switch on automatically.

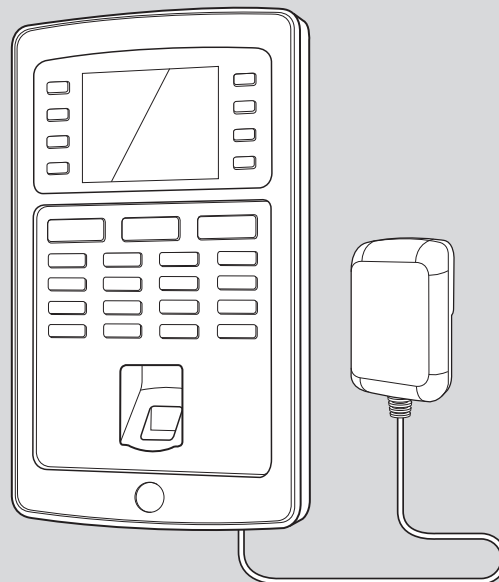


*Depending on the model you can also choose to connect the terminal wirelessly to your network via WiFi. Alternatively, all models can also operate as stand-alone devices, whereby clocking data can be retrieved using a USB stick.

Please note: the Mini-USB connector located at the back of the device, next to the Ethernet connector, is not meant for communication between terminal and software (for manufacturer setup operations only).




1.3 TERMINAL - DESCRIPTION OF THE KEYS

- | | |
|---|--|
| <ul style="list-style-type: none"> 01. Programmable function keys 02. Programmable function keys 03. Confirmation key 04. Clocking-in state 05. Clocking-out activation state 06. Keys for entering alphanumeric values | <ul style="list-style-type: none"> 07. Left/Right navigation / Power 08. Back to previous menu step 09. Up/Down navigation 10. Enter device menu 11. USB port 12. Reset button |
|---|--|

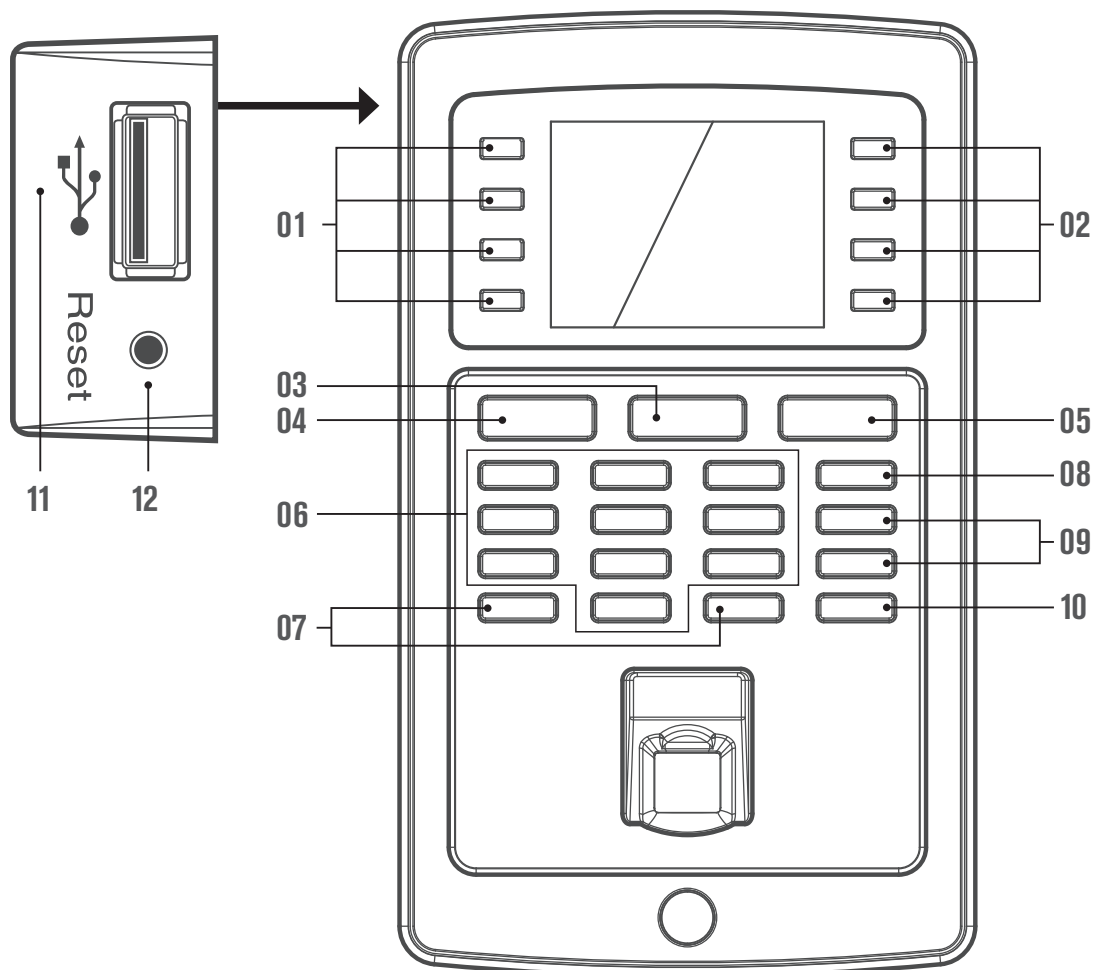

LANGUAGE SETTINGS

The default language of the terminal is English. To change the terminal language:

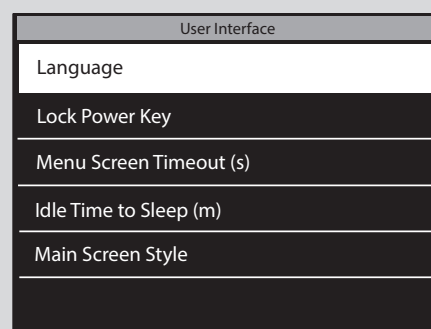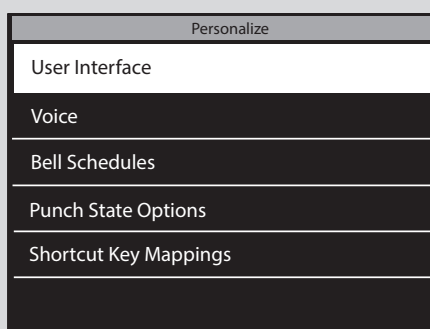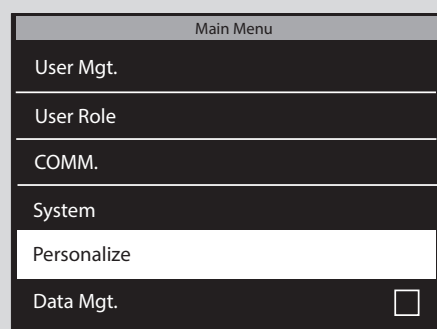

1. Press **MENU**, use the arrow keys to Navigate to **Personalize** and press **OK**.

2. Select **User Interface** and press **OK**.

3. Select **Language** and press **OK**.
Navigate to the desired language and press **OK**.

Menu navigation on the device:

Navigation between the menu items of the device is done using the arrow keys (left, right, up, and down). You can validate your choices by pressing **OK**, or cancel your action by pressing **ESC**.

Alphanumeric keyboard:

The different modes of the alphanumeric keyboard can be accessed through the **IN** button :

[Aa] - first letter is Upper case, the rest of the text is lower case

[a] - lower case letters

[A] - upper case letters


[123] - numbers

[symbol] - symbols

The **OUT** button inserts a space

The left  deletes the text


The key with the symbol  is referred to as the **IN** key.

The key with symbol  is referred to as the **OUT** key.


1.4 FINGERPRINT PLACEMENT

Recommended fingers: the index finger, middle finger and the ring finger usually give the best results for registering a fingerprint template.

Proper finger placement:

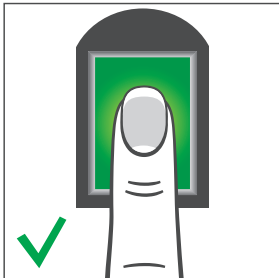


Improper finger placement:

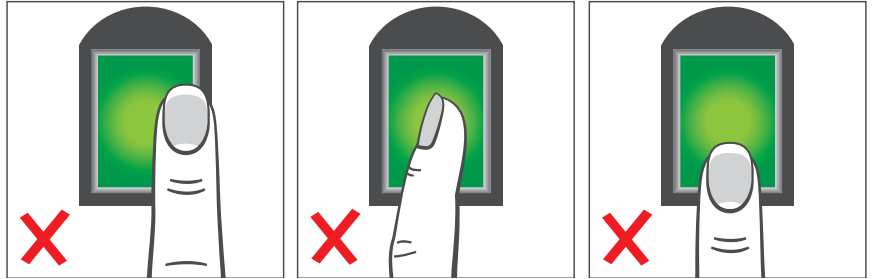

1.5 INSTALLING THE TERMINAL IN YOUR NETWORK

Network connection

Your terminal can be connected to your network, using either Ethernet (Wired LAN) or WiFi (Wireless LAN), depending on the model. First of all, your terminal needs to get an IP address from your network router. To find a free IP address on your network you can use the DHCP protocol, whereby your terminal is automatically assigned an IP address. If you do not wish to use DHCP, you can also manually assign a fixed IP address to your device. First you need to check the IP address of your computer (make sure it is connected to the same network as the terminal!), as the terminal needs to connect to the same IP address range.

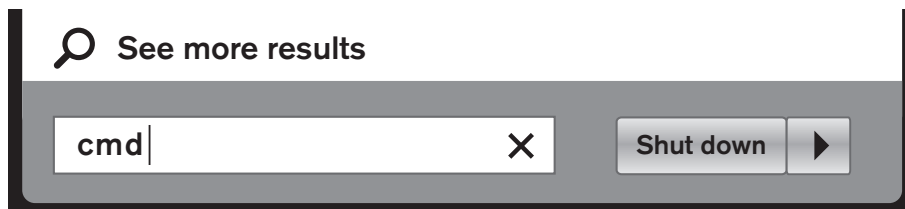

1. Press the Windows key on your computer keyboard and type 'CMD' in the search bar. Press Enter.

C:\Windows\system32\cmd.exe

C:\Users\John\ipconfig

C:\Users\John>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

Connection-specific DNS suffix : networkname.local
 Link-local IPv6 Address : fe80::852c:5404:4468:64c6%11
 IPv4 Address : 10.0.2.15
 Subnet Mask : 255.255.255.0
 Default Gateway : 10.0.2.2

C:\Users\John>ping 10.0.2.22

2. A small window will appear on your screen. In this window, type 'ipconfig'.
3. The IP address of your computer will be displayed.
4. To search for a free IP address which you can use for the terminal, type 'ping ', followed by your IP address, change the two last digits, and press Enter.

If you see a message such as 'Reply from 10.0.2.22 bytes = 32 time < 1ms TTL = 64', it means that the IP address you selected is not available. Try again with another IP address. If the IP address you selected is available you will see the message 'Destination host unreachable'. Note down this address since this will have to be entered into the terminal.

1.6 LAN CONNECTION

Main Menu
User Mgt.
User Role
COMM.
System
Personalize
Data Mgt.

COMM.
Ethernet
PC Connection
Wireless Network
ADMS

Ethernet	
IP Address	192.168.1.201
Subnet Mask	255.255.255.0
Gateway	0.0.0.0
DNS	0.0.0.0
TCP COMM. Port	4370
DHCP	

1. Press **MENU**, navigate to COMM using the arrow keys and press **OK**.
2. Select Ethernet. Press **OK**.
3. Highlight IP address and press **OK**.

Select Ethernet.
Please Input
<div style="border: 1px solid black; width: 150px; height: 20px; margin: 10px auto;"></div>
<div>Confirm (OK)</div> <div>Cancel (ESC)</div>

It is not necessary to change the other settings. Press **ESC** several time to go back to the main screen. Your device is now connected to the network using the Ethernet (LAN) connection.

4. Enter the free IP address you have found (see 1.5 step 4).

1.7 WIFI CONNECTION

Main Menu
User Mgt.
User Role
COMM.
System
Personalize
Data Mgt.

1. Press **[MENU]**, navigate to COMM using the arrow keys. Press **[OK]**.

COMM.
Ethernet
PC Connection
Wireless Network
ADMS

2. Select 'Wireless Network'. Press **[OK]**.

Wireless Network
WiFi <input checked="" type="checkbox"/>
CoNetwork Connected
NetWork_X
PrivateNet

3. Make sure that the WiFi checkbox is checked. A list of all available networks will be shown. Select the network you want to connect to.

Authentication
CoNetwork selected
Enter security key
<input type="text"/>
Confirm (OK) Cancel (ESC)

4. The terminal will prompt you for the network password. Enter the password using the keypad of the terminal and press **[OK]**.

Wireless Network
WiFi <input checked="" type="checkbox"/>
CoNetwork Connected
NetWork_X
PrivateNet

5. Wait for the connection to be established. The terminal is now connected to the network using the WiFi connection.

1.8 DHCP: PROS AND CONS

Using DHCP will enable you to connect your terminal to the network without having to find a free IP address, thereby simplifying the connection process. The DHCP server will automatically assign a free IP address to the terminal. However, if - for whichever reason - your DHCP server has to be restarted, your terminal might be assigned another IP address, which in turn could cause connection issues. In this situation, you need to manually change the terminal IP address in the Safescan TA-software on your computer.

1.9 SETTING UP AN ADMINISTRATOR USER (SUPER ADMIN)

Why set up an administrator?

Even though it is not mandatory, it is strongly advised to set up an administrator on the terminal. This will prevent employees accessing the menu of the machine and performing unwanted operations. After the administrator user has been registered, access to the menu of the terminal is locked for anyone else.

Main Menu
User Mgt.
User Role
COMM.
System
Personalize
Data Mgt.

1. Press **[MENU]**, navigate to user management using the arrow keys, press **[OK]**.

User Mgt.
New User
All Users

2. Select 'New User'. Press **[OK]**.

New User
User ID 1
Name
User Role Normal User
Fingerprint 0
Badge Number
Password

3. The device will select the first ID available. It is not necessary to change this ID. Press the down arrow key to highlight name, and press **[OK]**.

Name
Please Input
<input type="text"/>
IN key to switch input method, OUT key to enter space
[Aa]

4. Enter the user name with the alphanumeric keyboard). When you have finished, press **OK** twice. You can also leave this field empty and edit the user name at a later moment with the Safescan TA PC-software.

New User	
User ID	1
Name	
User Role	Normal User
Fingerprint	0
Badge Number	
Password	

5. Select User Role and press **OK**.

User Role
<input type="checkbox"/> Normal User
<input checked="" type="checkbox"/> Super Admin

6. Navigate to Super Admin and press **OK**.

Select the verification mode you want to use. We strongly advise, at least for the Super admin, to enable login with different verification modes. For example you can register a fingerprint and a password, or an RFID card and a password. In case one identification means is not available (anymore), there is always another solution to access the menu.

We recommend to note down the administrator password and store it in a safe place. If you do not have the ability to log into the terminal as administrator, the only option is to do a full reset of the terminal resulting in all data and user settings being lost.

1.10 REGISTERING A FINGERPRINT

New User	
User ID	1
Name	
User Role	Super Admin
Fingerprint	0
Badge Number	
Password	

1. Select 'Fingerprint' and press **OK**.

Enroll Fingerprint	
please select the finger to be enrolled	

2. Select the finger you want to register, using the arrow keys or the numeric keys, then press **OK**. The system will take your fingerprint 3 times in order to generate a reliable template. When the enrol has been successful, the system returns to the 'New User' registration page.

1.11 REGISTERING AN RFID CARD OR KEY FOB

New User	
User ID	1
Name	
User Role	Super Admin
Fingerprint	0
Badge Number	
Password	

1. Select 'Badge Number' and press **OK**.

Enroll Badge Number	
Please swipe badge	

2. Hold the RFID card/key fob in front of the terminal. You will hear a beep notifying you that the RFID number has been registered, the terminal returns to the New User screen.

1.12 SETTING A PASSWORD

New User	
User ID	1
Name	
User Role	Super Admin
Fingerprint	0
Badge Number	
Password	

Password	
Please Input	
<div>■ ■ ■</div>	
Confirm (OK)	Cancel (ESC)

1. Select 'Password' and press **OK**.
2. You can enter a password of maximum 8 numeric characters (no letters). Enter your password and press **OK**. The system will ask you to confirm this password.

Once finished with the registration, you can press **ESC**. Your Super Admin user has now automatically been saved.

User expiration rule: For more details regarding user expiration dates please see the advanced section of this manual, chapter 2.4.

1.13 DATE AND TIME SETTINGS

Main Menu
User Mgt.
User Role
COMM.
System
Personalize
Data Mgt.

System
Date Time
Attendance
Fingerprint
Reset
USB Upgrade

1. Navigate to 'System', and press **OK**.
2. Select 'Date Time' and press **OK**.

1.13.1 SET THE DATE

Date Time	
Set Date	28/04/14
Set Time	16:21:35
24-Hour Time	<input checked="" type="checkbox"/>
Date Format	DD/MM/YY
Daylight Saving Time	<input checked="" type="checkbox"/>
Daylight Saving Mode	By week/day

Set Date		
↑	↑	↑
2014	10	15
↓	↓	↓
YYYY	MM	DD
Confirm (OK)	Cancel (ESC)	

1. Select 'Set Date' and press **OK**.
2. Navigate between days, months and years by using the left/right arrows. To set the values you can either increase or decrease the value with the up/ down arrows, or enter the value directly with the numeric keyboard. Press **OK** when finished.

1.13.2 SET THE TIME

Date Time	
Set Date	28/04/14
Set Time	16:21:35
24-Hour Time	<input checked="" type="checkbox"/>
Date Format	DD/MM/YY
Daylight Saving Time	<input checked="" type="checkbox"/>
Daylight Saving Mode	By week/day

1. Select 'Set Time' and press **OK**.

Set Time		
↑	↑	↑
14	10	15
↓	↓	↓
HH	MM	SS
Confirm (OK)		Cancel (ESC)

2. Navigate between hours, minutes and seconds by using the left/right arrows. To set the values you can either increase or decrease the value with the up/ down arrows, or enter the value directly with the numeric keyboard. Press **OK** when finished.

1.13.3 TIME FORMAT

Date Time	
Set Date	28/04/14
Set Time	16:21:35
24-Hour Time	<input checked="" type="checkbox"/>
Daylight Saving Time	
Daylight Saving Mode	By week/ <input checked="" type="checkbox"/>

1. You can select 24-hour time or 12-hour (AM/ PM) time format. To select, check or uncheck the checkbox of the 24-Hour Time option.

FOR AN EXPLANATION ON HOW TO SET UP DAYLIGHT SAVING TIME PLEASE SEE CHAPTER 2.7 OF THIS MANUAL.

1.14 ENROLLING USERS (NORMAL USER)

The user enrolment process of a normal user is identical to the administrator enrolment, see chapter 1.9 to 1.11. The only difference is in the User Role.

User Role	
<input checked="" type="checkbox"/> Normal User	
<input type="checkbox"/> Super Admin	

1. For a regular user you need to select Normal User.

New User	
User ID	1
Name	
User Role	Normal User
Fingerprint	0
Badge Number	
Password	


2. In the New User setup screens you will now see "Normal User" in the User Role field.

1.15 CLOCKING IN / CLOCKING OUT

The basic clocking scenario: the screen of the terminal always displays the clocking status of the system. **IN** (→) or **OUT** (←) is displayed at the top bar of the screen, the corresponding symbol is also highlighted at the bottom of the screen. The terminal has two default states: **IN** (→) and **OUT** (←). If an employee comes in, they just need to verify that the terminal clocking status is set to **IN** (→), and identify themselves (fingerprint, RFID badge or pin code), their clock-in time is thereby registered. If the employee has finished working, they need to verify that the terminal's clock status is set to **OUT** (←) and identify themselves - their clock-out time is thereby registered.

- Using fingerprint identification: Select → or ←, and press the finger on the fingerprint reader on the terminal.
- Using RFID identification: Select → or ←, and swipe the badge/ key fob in front of the RFID reader on the terminal.
- Using password identification: Select → or ←, type in the user ID, press **OK**, type in the password, and press **OK**.

For more advanced scenarios (such as clocking with workcodes), please refer to the advanced section of this manual, chapter 2.10.

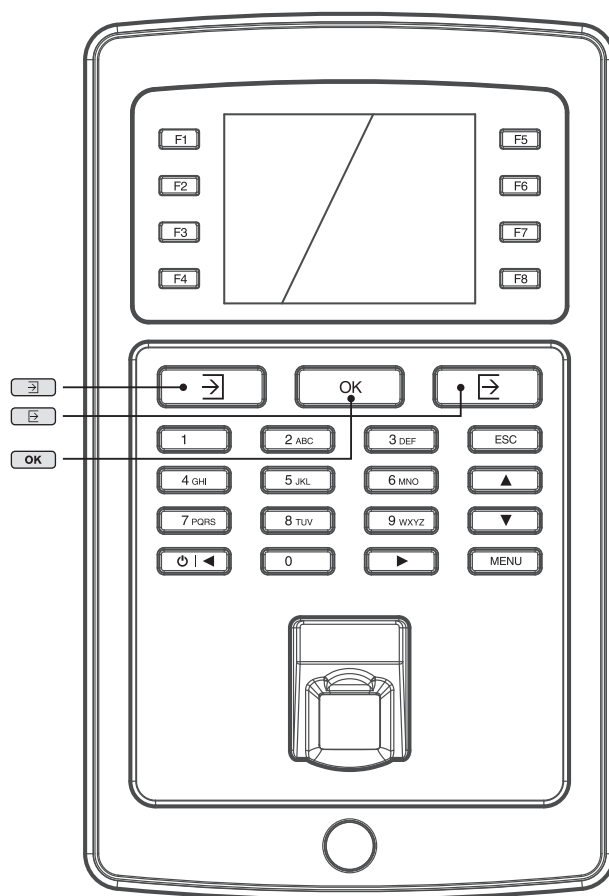

1.16 RETRIEVE USER AND CLOCKING DATA USING A USB STICK

If you do not have access to a network connection, or choose not to install the terminal in your network, you can use a USB stick (USB flash disk) to retrieve the user and clocking data from your terminal and transfer them to the TA-software. It is also possible to upload user data edited in or created with the TA-software into the terminal via a USB stick.

USB Stick requirements

The USB stick has to be formatted in FAT or FAT32. The firmware of your USB stick must support Linux kernel 2.4. This information should be mentioned on the packaging of the USB Stick.


User data:

Main Menu
Access Control
USB Manager
Attendance Search
Short Message
Work Code
Autotest


USB Manager
Download
Upload
Download Options

Download
Access Data
User Data
Work Code
Short Message


1. Insert a USB stick into the USB port at the left side of the terminal. Wait for a few seconds until the USB stick is initialized. Navigate to 'USB Manager', and press **OK**.
2. Select 'Download' and press **OK**.
3. Select 'User Data' and press **OK**. The data will now be transferred to the USB stick.

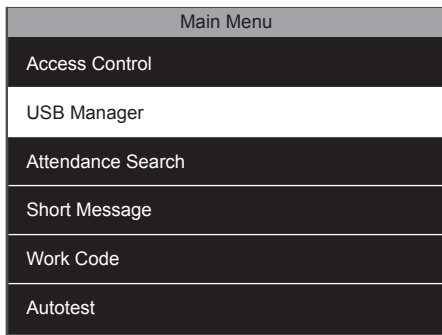Clocking data:

1. Insert a USB stick into the USB port at the left side of the terminal. Wait for a few seconds until the USB stick is initialized. Navigate to 'USB Manager', and press **OK**.

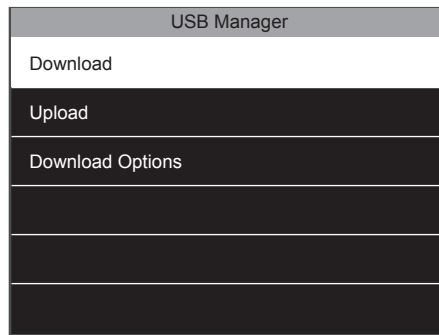


2. Select 'Download' and press **OK**.

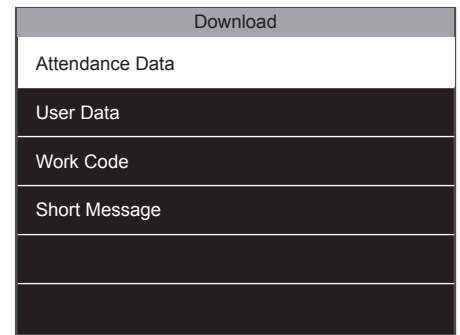


3. Select 'Attendance Data' and press **OK**. The data will now be transferred to the USB stick.

1.17 UPLOADING USER DATA TO THE TERMINAL


User data can be edited in the Safescan TA software. If you would like these changes to be reflected on the terminal, you need to upload the user data.

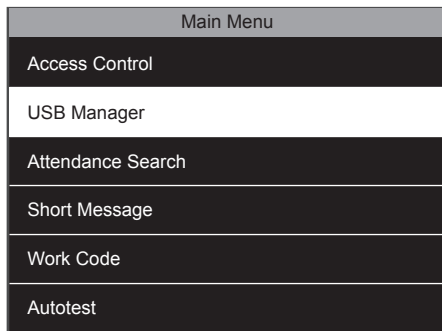

1. Insert a USB stick into the USB port at the left side of the terminal. Wait for a few seconds until the USB stick is initialized. Navigate to 'USB Manager', and press **OK**.

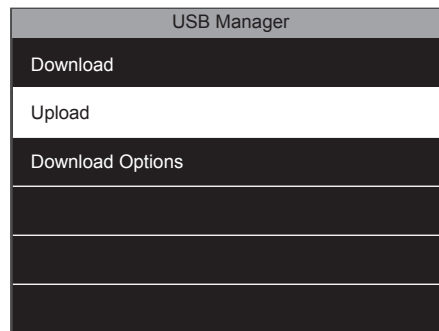


2. Select 'Upload' and press **OK**.

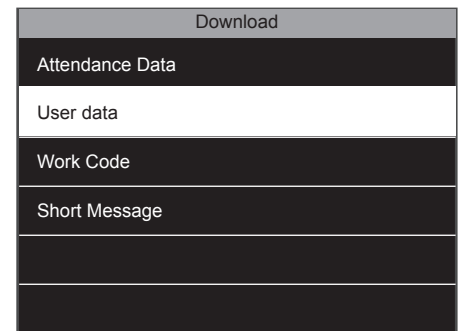


3. Select 'User Data'

1.18 CHECKING CLOCKING DATA ON THE TERMINAL

It is possible to check the clocking data directly on the terminal. By default, a shortcut to this function has been implemented. From the clocking screen, press F6, and identify yourself. The terminal will display a list of your clocking data. A super administrator can see the clocking data of all employees.

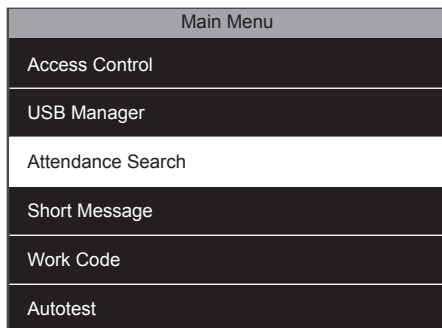

1. Press **MENU** and navigate to 'Attendance Search'. Press **OK**.

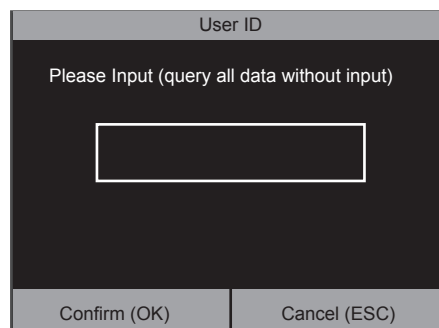

2. Enter the ID of the user of whom you want to see the data and press **OK**. If you leave the box empty, you will see the clocking data of all the users (when identified as Super Admin only).

2. ADVANCED USAGE SCENARIOS

2.1 USER MANAGEMENT

User information can be easily managed directly on the terminal. You can amend any detail of a specific user, delete specific information or an entire user.

Main Menu
User Mgt.
User Role
COMM.
System
Personalize
Data Mgt.

1. Enter the menu, select 'User Mgt.', press **OK**.

User: 1 John
Edit
Delete

4. Two options are available: Edit or Delete.

User Mgt.
New User
All Users

2. Select 'All Users' and press **OK**.

All Users
1 John
2 Paul
3 Mary
4 George
5 Peter

3. The device will display a list of all users in the terminal's memory. To select a user, navigate with the Up and Down keys, or use the alphanumeric keys. When you have found the right user, press **OK**.

2.2 EDIT USERS

User: 1 John
Edit
Delete

1. Select 'Edit' and press **OK**. It is now possible to edit all user data. When you are finished, press **ESC**. The changes will be saved.

2.3 DELETE USERS

User: 1 John
Edit
Delete

1. Select 'Delete' and press .

Delete: 1 John
Delete User
Delete Fingerprint Only
Delete Password Only
Delete Badge Number Only

2. You will be given several options:

Delete User: delete all user information.

Delete User role (only available if user has privileges superior to normal user): reset privileges to normal user. **Delete**

Fingerprint Only (only available if fingerprint templates are registered for the

user): delete all fingerprint templates of the user. **Delete Password Only** (only available if a password is registered for the user): delete user's password. **Delete Badge Number Only** (only available if a RFID badge is registered for the user): delete the RFID number linked to the user.

NOTE: DELETING A USER DOES NOT DELETE HER/HIS CLOCKING DATA.

2.4 EXPIRATION RULE

It is possible to pre-define the validity of a user in the terminal. This validity can be set to a certain date and/or a given number of clocking actions.

Main Menu
User Mgt.
User Role
COMM.
System
Personalize
Data Mgt.

1. By default the Expiration rule is not enabled in the system. In order to enable it, press , select 'System' and press .

System
Date Time
Attendance
Fingerprint
Reset
USB Upgrade

2. Select 'Attendance' and press .

Attendance	
Attendance Log Alert	99C
Cyclic Delete ATT Data	Disabled
Confirm Screen Delay (s)	3
Save illegal Verification Record	<input type="checkbox"/>
Expiration Rule	<input checked="" type="checkbox"/>
Expiration Rule Options	Delete User

3. Select 'Expiration Rule', make sure that the Expiration Rule checkbox is checked and press .

2.5 EXPIRATION RULE OPTIONS

There are 3 different options when a user has reached their expiration date/ number of punches.

Expiration Rule Options
<input type="checkbox"/> Keep user, No audit future punch
<input type="checkbox"/> Keep user, and audit future punch
<input checked="" type="checkbox"/> Delete User

1. **Keep user, No audit future punch:** The user is kept in memory, they will receive a message on the screen stating that their credentials are invalid. **Keep user, and audit future punch:** The user is kept in memory,

they will receive a message on the screen stating that their credentials are invalid, but the punches will be still stored in the device. **Delete User:** The user will be deleted when the expiration rule is matched.

Edit: 1 John	
Name	John
User Role	Normal User
Fingerprint	2
Badge Number	14/3248
Password	*****
User Expiration Rule	

2. Once the Expiration Rule has been activated, this option is available for selection in the user details screen. To set an expiration rule, navigate to the User details screen, select 'User Expiration Rule' and press .

Expiration Options
<input checked="" type="checkbox"/> None
<input type="checkbox"/> Expiration Date
<input type="checkbox"/> Entries
<input type="checkbox"/> Expiration Date and Entries

3. Select 'Expiration Options' and press OK.
The system will display the various expiration options:
None: no expiration rule for this user.
Expiration date: the user will become invalid at the selected date.

Entries: The user will expire after the selected number of punches.
Expired Date and Entries: The user will only be considered as valid during a certain period, and for a certain number of punches.

2.6 USING WORK CODES

You can adapt the terminal to the clocking needs of your business. If you want to track more than just the clocking in and clocking out time of your employees, you can have your employees clock in with work codes to track the amount of time spent on a specific project, event or task.

2.6.1 CREATE A NEW WORK CODE

Main Menu
Access Control
USB Manager
Attendance Search
Short Message
Work Code
Autotest

1. Enter the menu, navigate to 'Work Code', press **OK**.

Work Code
New Work Code
All Work Codes
Work Code Options

2. Select 'New Work Code' and press **OK**.

New Work Code
ID 1
Name

3. The terminal will display the first Work code ID available. You can select a different ID number if you want. Then, select Name and press **OK**.

Name
Please Input
<input type="text"/>
IN key to switch input method, OUT key to enter space
[Aa]

4. Enter the name of the work code you want to create, for example Customer visit, a project name, Vacation, Sick leave etc.

2.6.2 EDIT AN EXISTING WORK CODE

Main Menu
USB Manager
Attendance Search
Short Message
Work Code
Autotest
System info

1. Navigate to 'Work Code', press .

Work Code
New Work Codes
All Work Codes
Work Code Options

2. Select 'All Work Codes' and press .

All Work Code	
1	Customer's visit
2	Project 1
3	Meeting

3. Navigate to the work code you want to edit and select it by pressing .

1
Edit
Delete

4. Select 'Edit' and press .

NOTE: YOU CAN ONLY EDIT THE FUNCTION CODE NAME, NOT THE ID.

2.6.3 DELETE A WORK CODE

Main Menu
USB Manager
Attendance Search
Short Message
Work Code
Autotest
System info

1. Navigate to 'Work Code', press .

Work Code
New Work Codes
All Work Codes
Work Code Options

2. Select 'All Work Codes' and press .

All Work Code	
1	Customer's visit
2	Project 1
3	Meeting

3. Navigate to the work code you want to edit and select it by pressing .

1
Edit
Delete

4. Select 'Delete' and press . The terminal will ask you to confirm your selection.

2.6.4 CLOCKING WITH A WORK CODE

Make sure that the terminal is set to the desired In/Out status. Press the Work Code button (the default button is F5). Select a work code from the list and press **OK**. After this the user needs to identify himself with fingerprint, RFID badge or pin code.

2.7 DAYLIGHT SAVING TIME

It is possible to have your terminal automatically change time for summer and winter time. There are two different ways to do this: by date/time, or by week/day. The Date/Time mode is the easiest to set-up: just enter the date and time when daylight saving time begins and ends. The downside of this method is that these dates vary from year to year, meaning they have to be manually set into the terminal every year. Even though the Week/Day mode may seem a bit more complicated to set up, the big advantage is that the daylight saving time does not need to be entered again every year.

NOTE: ONLY THE SUPER ADMIN USER CAN EDIT DAYLIGHT SAVING TIME SETTINGS.

2.7.1 DAYLIGHT SAVING TIME: DATE/TIME SETTING

Main Menu
User Mgt.
User Role
COMM.
System
Personalize
Data Mgt.

System
Date Time
Attendance
Fingerprint
Reset
USB Upgrade

Date Time	
Set Date	28/04/14
Set Time	16:21:35
24-Hour Time	<input checked="" type="checkbox"/>
Daylight Saving Time	<input checked="" type="checkbox"/>
Daylight Saving Mode	By week/day

1. From the home screen, press **MENU** and identify as a **super administrator**. Navigate to System, and press **OK**.

2. Select 'Date Time' and press **OK**.

3. Make sure that the 'Daylight Saving Time' option is checked. If not, navigate to Daylight Saving Time and press **OK**.

Date Time	
Set Date	28/04/14
Set Time	16:21:35
24-Hour Time	<input checked="" type="checkbox"/>
Daylight Saving Time	<input checked="" type="checkbox"/>
Daylight Saving Mode	By date/time

Date Time	
Set Time	16:21:35
24-Hour Time	<input checked="" type="checkbox"/>
Date Format	DD/MM/YY
Daylight Saving Time	<input checked="" type="checkbox"/>
Daylight Saving Mode	By date/time
Daylight Saving Setup	

Daylight Saving Setup	
Start Date	03/29
Start Time	02:00
End Date	10/24
End Time	02:00

4. Navigate to 'Daylight Saving Mode', and select 'By date/time'. Press **OK**.

5. Select 'Daylight Saving Setup' and press **OK**.

6. Select 'Start Date', press **OK**.

Set Date
04 29
MM DD
Confirm (OK) Cancel (ESC)

Daylight Saving Setup	
Start Day	Sunday
Start Time	02:00
End Month	10
End Week	5
End Day	Sunday
End Time	02:00

Set Time
02 00
HH MM
Confirm (OK) Cancel (ESC)

7. Enter the date when the daylight saving time begins. Confirm by pressing **OK**.

8. Select 'Start Time', press **OK**.

9. Enter the start time. Confirm by pressing **OK**.

Daylight Saving Setup	
Start Date	03/29
Start Time	02:00
End Date	10/24
End Time	02:00

10. Select 'End Date', press **OK**.

End Date	
10	24
MM	DD
Confirm (OK)	Cancel (ESC)

11. Enter the date when daylight saving time ends. Confirm by pressing **OK**.

Daylight Saving Setup	
Start Date	03/29
Start Time	02:00
End Date	10/24
End Time	02:00

12. Select 'End Time', press **OK**.

End Time	
02	00
HH	MM
Confirm (OK)	Cancel (ESC)

13. Enter the end time. Confirm by pressing **OK**.
The terminal will now take the entered daylight saving dates and times into account.

2.7.2 DAYLIGHT SAVING TIME: WEEK/DAY SETTING

In some regions there is a fixed rule for when daylight saving time starts and ends. For example, in Europe, Daylight Saving Time always starts on the last Sunday of March at 02:00 AM and ends on the last Sunday of October at 02:00 AM (Central European Time).

Main Menu
User Mgt.
User Role
COMM.
System
Personalize
Data Mgt.

1. From the home screen, press **MENU** and identify as a **super administrator**. Navigate to System, and press **OK**.

System
Date Time
Attendance
Fingerprint
Reset
USB Upgrade

2. Select 'Date Time' and press **OK**.

Date Time	
Set Date	28/04/14
Set Time	16:21:35
24-Hour Time	<input checked="" type="checkbox"/>
Daylight Saving Time	<input checked="" type="checkbox"/>
Daylight Saving Mode	By week/day

3. Make sure that the Daylight Saving Time option is checked. If not, navigate to 'Daylight Saving Time' and press **OK**.

Date Time	
Set Date	28/04/14
Set Time	16:21:35
24-Hour Time	<input checked="" type="checkbox"/>
Daylight Saving Time	<input checked="" type="checkbox"/>
Daylight Saving Mode	By week/day

4. Navigate to 'Daylight Saving Mode', and select 'By week/day'.

Date Time	
Set Time	16:21:35
24-Hour Time	<input checked="" type="checkbox"/>
Daylight Saving Time	<input checked="" type="checkbox"/>
Daylight Saving Mode	By week/day
Daylight Saving Setup	

5. Select 'Daylight Saving Setup' and press **OK**.

Daylight Saving Setup	
Start Month	3
Start Week	5
Start Day	Sunday
Start Time	02:00
End Month	10
End Week	5

6. Select 'Start Month', press **OK**.
Select the month when daylight saving time begins (1 = January, 2 = February etc.). In our example we need to select 3 for March. Confirm your selection by pressing **OK**.

Daylight Saving Setup	
Start Month	3
Start Week	5
Start Day	Sunday
Start Time	02:00
End Month	10
End Week	5

7. Select 'Start Week', and press **OK**.
Select the week number in the month. In our example we need to select week number 5.
NB: Even if the last Sunday occurs in week number 4 (in 2014 for example) the system will adapt, and select the correct day.

Daylight Saving Setup	
Start Month	3
Start Week	5
Start Day	Sunday
Start Time	02:00
End Month	10
End Week	5

10. Select 'End Month', press **OK**.
Select the month when daylight saving time ends. In our example we need to select 10 for October. Confirm your selection by pressing **OK**.

Daylight Saving Setup	
Start Day	Sunday
Start Time	02:00
End Month	10
End Week	5
End Day	Sunday
End Time	02:00

13. Select 'End Time', press **OK**.
Enter the time when daylight saving time ends (02:00 in our example).
Confirm with **OK**.

Daylight Saving Setup	
Start Day	Sunday
Start Time	02:00
End Month	10
End Week	5
End Day	Sunday
End Time	02:00

8. Select 'Start Day', press **OK**.
Select the desired day (Sunday in our example). Press **OK**.

Daylight Saving Setup	
Start Month	3
Start Week	5
Start Day	Sunday
Start Time	02:00
End Month	10
End Week	5

11. Select 'End Week', and press **OK**.
Select the week number in the month. In our example we need to select week number 5.
NB: Even if the last Sunday occurs on week number 4 (in 2016 for example) the system will adapt, and select the correct day.

Daylight Saving Setup	
Start Day	Sunday
Start Time	02:00
End Month	10
End Week	5
End Day	Sunday
End Time	02:00

9. Select 'Start Time', press **OK**.
Enter the time when daylight saving time starts (02:00 in our example).
Confirm with **OK**.

Daylight Saving Setup	
Start Day	Sunday
Start Time	02:00
End Month	10
End Week	5
End Day	Sunday
End Time	02:00

12. Select 'End Day', press **OK**.
Select the desired day (Sunday in our example). Press **OK**.

2.8 CUSTOM USER ROLES

There are two standard user roles in the terminal: **Normal User** and **Super Administrator**. It is also possible to define custom roles. These custom roles ("User Defined Roles") allow to grant access to certain functions of the terminal. Creating custom user roles can only be done by the Super Administrator.

Create a new Custom User Role:

Main Menu
User Mgt.
User Role
COMM.
System
Personalize
Data Mgt.

User Role
User Defined Role 1
User Defined Role 2
User Defined Role 3

User Defined Role 1
Enable Defined Role <input checked="" type="checkbox"/>
NameUser Defined Role 1
Defined User Role

1. From the home screen, press **[MENU]** and identify as Super Admin. Select 'User Role' and press **[OK]**.
2. 3 customisable user roles are displayed on the screen, select one and press **[OK]**.
3. Check the 'Enable Defined Role' checkbox to make this role appear in the user role list.

User Defined Role 1
Enable Defined Role <input checked="" type="checkbox"/>
NameUser Defined Role 1
Defined User Role

Name
Please Input
<div></div>
IN key to switch input method, OUT key to enter space
[Aa]

User Defined Role 1
Enable Defined Role <input checked="" type="checkbox"/>
NameUser Defined Role 1
Defined User Role

4. Select 'Name' and press **[OK]**.
5. You can give a specific name to the role. Enter the name using the alphanumeric keyboard of the terminal.
6. Select 'Defined User Role' and press **[OK]**.

User Defined Role 1
<input checked="" type="checkbox"/> User Mgt. <input checked="" type="checkbox"/> New User
<input checked="" type="checkbox"/> COMM. <input checked="" type="checkbox"/> All Users
<input type="checkbox"/> System
<input type="checkbox"/> Personalize
<input type="checkbox"/> Data Mgt.
<input type="checkbox"/> Access Control

User Role
<input checked="" type="checkbox"/> Normal User
<input type="checkbox"/> Super Admin
<input type="checkbox"/> User Defined Role 1

7. The screen is divided into two sections. The left section displays the main menu items, and the right section displays the sub menu items of the selected item. You can check or uncheck all the functionalities you want to associate with role. For more details regarding the menu items, please refer to chapter 3 of this manual. Press **ESC** when you have finished.
8. From now on, when you create a new user (see chapter 1.14) you will see the User Role that you have just defined appear in the selection options.

2.9 SHORT MESSAGE SERVICE

The terminal can be used for internal communications purposes. You can create short messages that will be displayed for one or more specific users, or everyone in the company. The message will appear on the screen when the user identifies themselves to the terminal. Only the Super Admin user can create these messages.

Create a new message:

Main Menu
USB Manager
Attendance Search
Short Message
Work Code
Autotest
System info

Short Message
New Message
Public Message
Personal Message
Draft Message
Message Options

New Message	
Message	
Start date	29/04/14
Start Time	14:00
Expired Time (m)	60
Message Type	Draft

1. From the home screen, press **[MENU]** and identify as super admin. Select 'Short Message' and press **[OK]**.
2. Select 'New Message' and press **[OK]**.
3. To type your message, select 'Message' and press **[OK]**.

Message
[Aa]

New Message	
Message	
Start date	29/04/14
Start Time	14:00
Expired Time (m)	60
Message Type	Draft

Set Date		
2014	10	15
YYYY	MM	DD
Confirm (OK)	Cancel (ESC)	

4. You can type in your message using the alphanumeric keyboard. Press **[OK]** when you have finished or **ESC** if you want to cancel.
5. You can then select a start date and time for your message to be displayed. By default the start date and time are the date and time of creation of the message.
6. Select 'Start Date', press **[OK]**.

New Message	
Message	
Start date	29/04/14
Start Time	14:00
Expired Time (m)	60
Message Type	Draft

New Message	
Message	
Start date	29/04/14
Start Time	14:00
Expired Time (m)	60
Message Type	Draft

7. After this you need to define an expiration time (in minutes) for the message. The value of the expiration time can be set between 1minute to 65535 minutes. You can also choose to display this message permanently by setting the expiration time to 'never'.
8. Select the message type. It can either be a draft that is saved into the terminal, but not displayed, or a public message, that will be displayed to everyone clocking on the terminal, or a personal message displayed only to selected users.

By default a message will be shown on the screen for 60 seconds, unless a user presses **[OK]** or **ESC**. To change this value, go to the Short Message menu, select Message Options and Message Show Delay (s). Here you can set the value of your choice.

2.10 CUSTOMISE THE FUNCTION KEYS

The terminal has 8 user definable function keys. You can link these keys to different actions. If your employees regularly perform a specific action that you want to keep track of, you can link this action to one of the function keys. You can also use the keys to directly access a specific element of the menu.

2.11 PUNCH STATE VALUES

Each time an employee clocks on the terminal, this clocking action is registered with a punch state value that can be interpreted by the Safescan TA Software. The default values are:

Action	Punch State value
Clock IN	0
Clock OUT	1
Break	2
Return from break	3

By default the Safescan TA software interprets the Punch State Value 4 as an ignored clocking action.

2.11.1 LINK A PUNCH ACTION TO A FUNCTION KEY

Main Menu
User Mgt.
User Role
COMM.
System
Personalize
Data Mgt.

Personalize
User Interface
Voice
Bell Schedules
Punch State Options
Shortcut Key Mappings

Shortcut Key Mappings
F1 Break
F2 Return
F3 Overtime-In
F4 Overtime-Out
F5 Work Code
F6 Personal Records Search

1. From the main screen, press **[MENU]** and identify as super administrator. Select 'Personalize', and press **[OK]**.
2. Select 'Shortcut Key Mappings', press **[OK]**.
3. Select the key you want to edit and press **[OK]**.

F6
Function Personal Record Search

Function
<input type="checkbox"/> Undefined
<input checked="" type="checkbox"/> Punch State
<input type="checkbox"/> New User
<input type="checkbox"/> All Users
<input type="checkbox"/> Ethernet
<input type="checkbox"/> Serial Comm

F6
Punch State Value 6
Function Punch State
Name
Set Switch Time

4. Select 'Function' and press **[OK]**.
5. Tick the 'Punch State' checkbox.
6. Select 'Punch State Value', press **[OK]**.

Punch State Value	
Please input (0 ~ 250)	
<div style="border: 1px solid black; width: 150px; height: 30px; margin: 0 auto;"></div>	
Confirm (OK)	Cancel (ESC)

7. Since values 0 ~4 are already pre-defined in the Safescan TA Software, please enter a value between 5 and 250.

F6	
Punch State Value	6
Function	Punch State
Name	
Set Switch Time	

8. Select 'Name', press **OK**. Fill in the name of your Punch action.

F6	
Punch State Value	6
Function	Punch State
Name	
Set Switch Time	

9. It is also possible to set a switch time for this punch state. Select 'Set Switch Time', press **OK**.

Set Switch Time	
Switch Cycle	Daily
Monday	
Tuesday	
Wednesday	
Thursday	
Friday	

10. Select 'Switch Cycle' and press **OK** to select the days you want to activate the punch state. Press **ESC** when finished.

Monday	
<div style="display: flex; justify-content: space-around;"> <div style="border: 1px solid black; padding: 5px; text-align: center;">10</div> <div style="border: 1px solid black; padding: 5px; text-align: center;">24</div> </div>	<div style="display: flex; justify-content: space-around;"> <div style="border: 1px solid black; padding: 5px; text-align: center;">24</div> </div>
MM	DD
Confirm (OK)	Cancel (ESC)

11. Set the time for each day. Select the day, press **OK**, and set the time when the punch state will be activated. Confirm with **OK**.

You need to set up the Safescan TA software to have it recognise your new Punch State value. For more information, please refer to the Safescan TA Software manual.

2.12 MENU SHORTCUTS

Main Menu	
User Mgt.	
User Role	
COMM.	
System	
Personalize	
Data Mgt.	

1. From the main screen, press **MENU**, and identify as super administrator. Select 'Personalize', and press **OK**.

Personalize	
User Interface	
Voice	
Bell Schedules	
Punch State Options	
Shortcut Key Mappings	

2. Select 'Shortcut Key Mappings', press **OK**.

Shortcut Key Mappings	
F1	Break
F2	Return
F3	Overtime-In
F4	Overtime-Out
F5	Work Code
F6	Personal Records Search

3. Select the key you want to edit and press **OK**.

F6	
Function	Personal Record Search

4. Select 'Function' and press **OK**.

Function	
<input type="checkbox"/>	Undefined
<input type="checkbox"/>	Punch State
<input checked="" type="checkbox"/>	New User
<input type="checkbox"/>	All Users
<input type="checkbox"/>	Ethernet
<input type="checkbox"/>	Serial Comm

5. Tick the checkbox corresponding to the function you want to link to the key.


2.13 ACCESS CONTROL

The Safescan TA-8015 / 8025 / 8035 models are equipped with basic access control capabilities. You can link your terminal to an electric lock, a door sensor, an alarm and a door opening switch. Employees can open a door linked to the device by punching (clocking). It is possible to trigger an alarm in some situations (door left open, coming in under duress, unrecognised user). Please refer to the connection schematics below and Appendix 1.

Please note: You cannot link any Wiegand communication equipment.

To unlock the door, the enrolled user must meet the following conditions:

1. The current time should be within the defined access time for the user or the group the user belongs to.
2. The group the user belongs to must have access control capability.

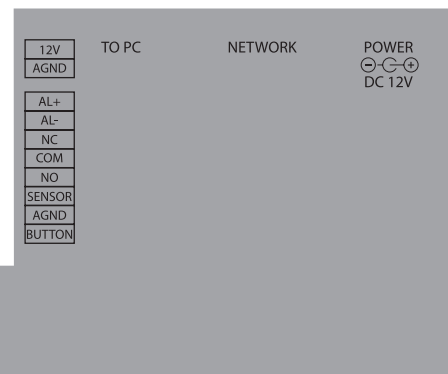

2.13.1 ACCESS CONTROL DEFAULT SETTINGS

By default there is only one user access group in the terminal, you can create several groups to accommodate to your company needs.

2.13.2 ACCESS CONTROL TIME SCHEDULES

First, a schedule has to be defined when the door will be allowed to be opened. There are fifty available schedules in the machine. By default schedule number one is used, it allows door opening from Sunday 00:00 to Saturday 23:59. You can either edit this schedule or select another one to edit.

Main Menu
Access Control
USB Manager
Attendance Search
Short Message
Work Code
Autotest

Access Control
Access Control options
Time Schedule
Holidays
Access Groups
Combined Verification
Duress Options

Time Schedule 01/50	
Sunday	00:00 23:59
Monday	00:00 23:59
Tuesday	00:00 23:59
Wednesday	00:00 23:59
Thursday	00:00 23:59
Search Time Period (1-50) <input type="text"/>	

1. From the main screen, press **[MENU]** and identify as super administrator. Select 'Access Control' and press **[OK]**.

2. Select 'Time Schedule' and press **[OK]**.

3. The device will display by default the first of the fifty schedules available. You can see day by day the time when the door can be opened. If you want to change the door opening time for a specific day, select the day and press **[OK]**.

Sunday			
↑	↑	↑	↑
00	00	00	00
↓	↓	↓	↓
HH	MM	HH	MM
Confirm (OK)		Cancel (ESC)	

Time Schedule 01/50
Search Time Period (1-50) <input type="text"/>

4. You can define the start and the end time for this day. When you are finished, confirm with **[OK]**, or cancel with **ESC**.

5. To edit a different schedule just type its number in the search field at the bottom of the screen.

2.13.3 CREATE AN ACCESS GROUP

PLEASE NOTE: Each time a group is added, this group should be referenced in the combined verification list. If it is not, users belonging to this group will not be able to use door access, i.e. open the door.

Main Menu
Access Control
USB Manager
Attendance Search
Short Message
Work Code
Autotest

Access Control
Access Control options
Time Schedule
Holidays
Access Groups
Combined Verification
Duress Options

Access Groups
New Group
All Groups

1. From the main screen, press **MENU** and identify as super administrator. Select 'Access Control' and press **OK**.
2. Select 'Access Groups' and press **OK**.
3. Select 'New Group' and press **OK**.

Access Control
No. 2
Verification Mode Fingerprint/Password/b..
Time Period 1 1
Time Period 1 0
Time Period 1 0
Include Holidays <input type="checkbox"/>

4. You can change the ID of a new Access Group. You can also choose the default verification (identification) mode for the group. An access group can be linked to up to 3 different Time Periods (= Time Schedules) to accommodate different shift patterns. It is also

possible to decide if special holiday schedules apply to this access group. After all edits have been made press **ESC** twice to go back to the access control menu. You will now have to register your new group in the combined verification list.

2.13.4 COMBINED VERIFICATION

Access Control
Access Control options
Time Schedule
Holidays
Access Groups
Combined Verification
Duress Options

Combined Verification
1 01 00 00 00 00
2 02 00 00 00 00
3 03 00 00 00 00
4 01 00 00 00 00
5 01 00 00 00 00

1. From the 'Access Control' screen, select 'Combined Verification' and press **OK**.
2. The system will display the list of the ten possible Combined Verification patterns.

It is possible to link up to five access groups in a combined verification pattern. For example:

Combined Verification pattern	Result
01 00 00 00 00	Users belonging to group 1 are allowed to open the door.
02 00 00 00 00	Users belonging to group 2 are allowed to open the door.
03 02 00 00 00	Users belonging to group 3 can only open the door if a user from group 2 is clocking with them.

2.14 HOLIDAYS

You can define several holiday periods and link them with a specific time schedule

Access Control
Access Control options
Time Schedule
Holidays
Access Groups
Combined Verification
Duress Options


Holidays
Add Holidays
All Holidays

Time Schedule 01/50	
Sunday	00:00 23:59
Monday	00:00 23:59
Tuesday	00:00 23:59
Wednesday	00:00 23:59
Thursday	00:00 23:59
Search Time Period (1-50)	<input type="text"/>

1. From the 'Access Control' screen, select 'Holidays' and press **OK**.
2. You can either add a new holiday period, or consult the list of previously created holidays. Select 'Add Holiday' and press **OK**.
3. Edit the Start Date and the End Date, and select a time schedule to link to this Holiday. Press **ESC** when done.

If you select 'All Holidays', the terminal will display the list of all previously created holidays. Select one line, and press **OK**. You can either delete or edit the selected holiday.

2.15 LINK BETWEEN USERS, ACCESS GROUPS TIME SCHEDULES AND VERIFICATION MODES

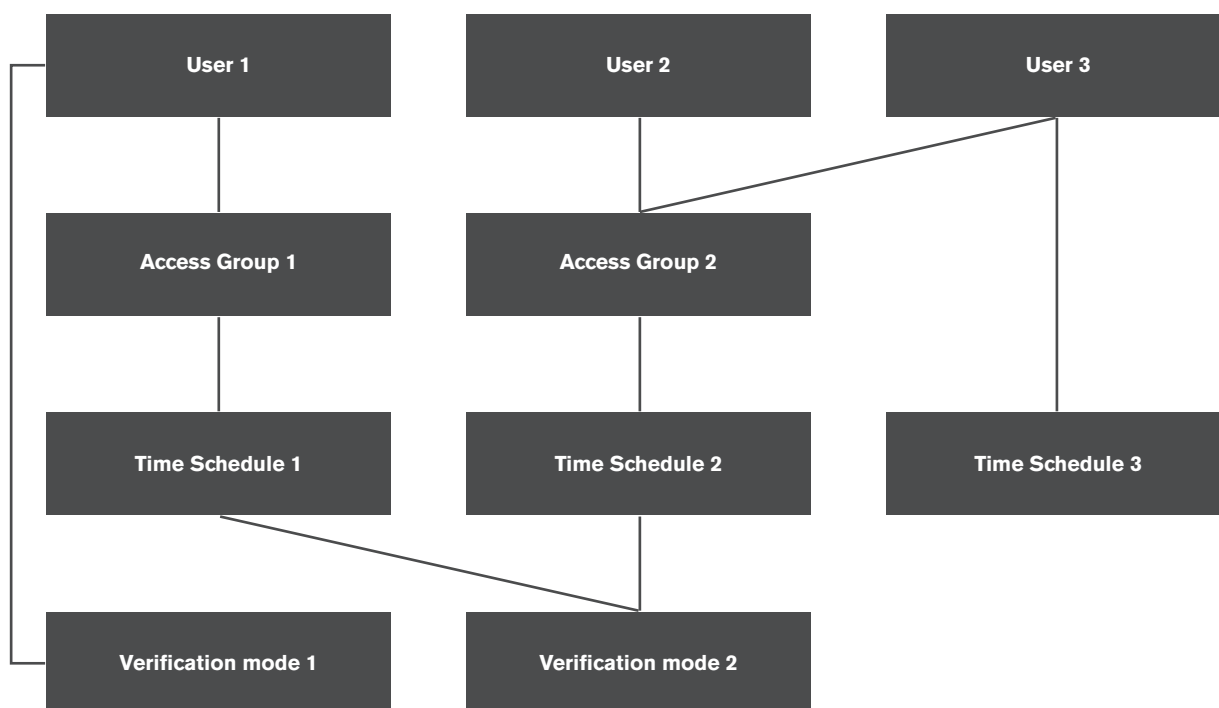

User 1 belongs to Access Group 1, they use Time Schedule 1 linked to their group, but is linked with the Verification Mode 1 instead of the Verification Mode 2 linked to their group.

User 2 belongs to Access Group 2, and uses the default Time Schedule and Verification Mode linked to their group.

User 3 also belongs to Access Group 2, they use Verification Mode 2 linked to their group, but is linked with Time Schedule 3.

2.16 DURESS OPTIONS

It is possible to select one or several verification (identification) modes that will trigger an alarm. It is also possible to set the time between the moment the user clocks in or out and the moment the alarm starts.

Access Control	Combined Verification
Access Control options	101 00 00 00 00
Time Schedule	202 00 00 00 00
Holidays	303 00 00 00 00
Access Groups	401 00 00 00 00
Combined Verification	501 00 00 00 00
Duress Options	

1.

From the access control screen, select Duress Options and press .
2.

Duress Function: The alarm will be triggered if the user presses a key mapped as the Duress key before punching. Please refer to the "Customise the function keys" section to learn how to map a key.
Alarm on 1:1 Match: The alarm will be triggered if the user punches with a 1:1 Match.

Alarm on 1:N Match: The alarm will be triggered if the user punches with a 1:N Match.
Alarm on Password: The alarm will be triggered if the user punches with a password.
Alarm Delay (s): Set the interval between the punch under duress and the alarm. The value can be between 1 and 999 seconds.

It is possible to use one or more than one way to trigger the alarm. Please note that you can also use a specific user fingerprint to trigger the alarm. This can be enabled in the user page.

About 1:1 and 1:N Matches:

- A **1:1 Match** occurs when the user first enters their ID, and then present their fingerprint. The terminal compares the fingerprint to the fingerprint template registered for this specific user.
- A **1:N Match** occurs when the user punches directly with their fingerprint. The terminal compares the fingerprint to all the templates in memory.

3. DESCRIPTION OF ALL FUNCTIONS AND MENU ITEMS

PLEASE NOTE: Your Safescan TA Terminal comes with the optimal settings already factory pre-configured. Changing some of the settings of the machine may cause problems with the device operation. Unless you are certain of the changes you are making, do not change the settings of the device. When in doubt, please contact Safescan's technical support department for assistance.

3.1 USER MANAGEMENT

This section contains user-related functionalities.

New User - register a new user.

1. **User ID** - Unique identifier for the user in the terminal. We advise to follow the terminal's suggestion of the user ID.
2. **Name** - The user name will be displayed every time a user performs a clocking action on the terminal.
3. **User Role** - There are two basic user roles: Super Admin and Normal User. The super administrator has the right to access every function of the terminal. A normal user is only entitled to perform clocking actions and view his/her own previous clocking data. Additionally you can create user-defined roles. You can assign any menu item to these user-defined roles.
4. **Fingerprint** - Register the user's fingerprint
5. **Password** - Register a password for the user (numbers only, maximum 8 digits).
6. **User Expiration Rule**. Define which expiration rule to apply to the user. Note: expiration rules must be activated in "System -> Attendance".
Expiration Options:
 - 6.1 **None**. No expiration rule is applied to the user.
 - 6.2 **Expired Date**. The expiration rule is applied at a given date.
 - 6.3 **Entries**. The expiration rule is applied after a given amount of punches (= clocking actions).
 - 6.4 **Expired Date and Entries**. The expiration rule is applied after a given amount of punches within a given timeframe.
7. **Access Control Rules**. Define access control settings for the user.
 - 7.1 **Access Group**. Link the user to a specific access group.
 - 7.2 **Verification Mode**. Select the verification mode to apply to the user. It can be the one defined for the group, or any other one.
 - 7.3 **Duress Fingerprint**. Define a fingerprint that will trigger the alarm if the user is forced to open the door under duress.
 - 7.4 **Apply Group Time Period**. It is possible to apply the group time period for the user, or to select any other previously defined time period.
8. **All Users** - Displays a list of all users that are registered in the terminal, and when required edit or delete any user.

3.2 USER ROLE

Create, edit and activate custom user roles. A maximum of three different user roles can be defined and managed.

1. **User defined Role**
 - 1.1. **Enable Defined Role** - Set the role as active or inactive.
 - 1.2. **Name** - Define a name for the role.
 - 1.3. **Define User Role** - Select the active menu items for the user role.

3.3 COMMUNICATION

Set-up the communication between the device and a network.

1. **Ethernet** - Manage the LAN connection settings.
 - 1.1. **IP Address** - The default IP address of the device is **192.168.1.201**, you might need to change it according to your network settings.
 - 1.2. **Subnet Mask** - The default value is **255.255.255.0**, you can change it if needed.
 - 1.3. **Gateway** - The default value is **0.0.0.0**, you can change it if needed.
 - 1.4. **DNS** - The default value is **0.0.0.0**, you can change it when needed.
 - 1.5. **TCP COMM Port** - The default communication port is **4370**, do not change it unless specifically instructed by a Safescan approved technician.
 - 1.6. **DHCP** - Dynamic Host Configuration Protocol, used by a server to dynamically allocate an IP address to the device.
 - 1.7. **Display in status bar** - Toggle the network status information icon on the main screen of the device.
2. **Serial Comm**
 - 2.1. **USB**. Enable the USB port of the device for communication with a PC. This should only be enabled at the request of a Safescan technician to perform special maintenance operations.
 - 2.1. **USB Baudrate**. USB communication speed.
3. **PC Connection** - Secure the connection between the device and a PC.
 - 3.1. **Comm Key** - You can set a password on the terminal that would have to be entered in the PC software. By default, there is no password set. This password is numbers only (one to six digits).
 - 3.2. **Device ID** - If you are using more than one Safescan TA terminal, you need to assign different ID's to each terminal.
4. **Wireless Network**
 - 4.1. **WiFi**. Switch WiFi on or off
 - 4.2. **Add Wifi Network**. Add manually a WiFi network if your network SSID is not displayed on the screen.
 - 4.3. **Advanced**

- 4.31. **DHCP.** Enable DHCP
- 4.3.2. **IP Address.** Fill-in an IP address for your device if DHCP is not enabled.
- 4.3.3. **Subnet Mask.** Fill-the address of the subnet mask if DHCP is not enabled.
- 4.3.4. **Gateway.** Fill-the address of the gateway if DHCP is not enabled.
- 5. **ADMS.** The device can use the ADMS settings to communicate with computers over the internet. For the moment, even if the functionalities are implemented, the device does not use it.
 - 5.1. **Enable Domain Name.** Communicate directly with a domain name.
 - 5.2. **Server Address.** If Domain name is not checked, specify an IP address for communication.
 - 5.3. **Server Port.** If Domain name is not checked, specify a port for communication.
 - 5.4. **Enable Proxy Server.** Enable this option if you need to go through a proxy server to communicate.
 - 5.5. **Proxy Server IP**
 - 5.6. **Proxy Server Port**
 - 5.7. **Display in Status Bar.** Display the ADMS connection status in the status bar.

3.4 SYSTEM

Set-up the basic system settings.

1. **Date Time** - All date/time related settings
 - 1.1. **Set Date** - Set the date of the terminal.
 - 1.2. **Set Time** - Set the time of the terminal.
 - 1.3. **24-hour time** - Choose between 24-hour or 12-hour time format
 - 1.4. **Daylight Saving Time** - Set up the automatic daylight saving time switching.
 - 1.5. **Daylight Saving Mode** - 2 modes can be selected: Date/time or Week/day.
 - 1.6. **Daylight Saving Setup**

Date/time:

 - 1.6.1. **Start Date** - Fill - in the date and month on which daylight saving time starts
 - 1.6.2. **Start Time** - Fill - in the hour on which daylight saving time starts.
 - 1.6.3. **End Date** - Fill - in the date and month on which daylight saving time ends.
 - 1.6.4. **End Time** - Fill - in the hour on which daylight saving time ends and return to normal time.

Week/day:

 - 1.6.5. **Start Month** - Select the month on which daylight saving time starts (1 is for January, 12 is for December)
 - 1.6.6. **Start Week** - Select the week number in the month where daylight saving time starts.
 - 1.6.7. **Start Day** - Select the day in the week
 - 1.6.8. **Start Time** - Select the hour of the day.
 - 1.6.9. **End Month** - Select the month when daylight saving time ends.
 - 1.6.10. **End Week** - Select the week number in the months where daylight saving time ends.
 - 1.6.11. **End Day** - Select the day in the week.
 - 1.6.12. **End Time** - Select the hour of the day.
2. **Attendance**

All settings regarding the way users' clocking actions and data are handled.

 - 2.1. **Duplicate Punch Period (m)** - Select the amount of time to ignore double clocking actions (between 1 and 60 minutes).
 - 2.2. **Attendance Log Alert** - Generates an alert when the available space becomes insufficient (between 1 and 99).
 - 2.3. **Cyclic Delete ATT Data** - Specify the maximum number of attendance records that can be deleted when their number reaches the upper limit defined in Attendance Log alert.
 - 2.4. **Confirm Screen Delay (s)** - Specify the time for displaying the authentication result (between 1 and 9 seconds).
 - 2.5. **Expiration Rule** - Apply the expiration rules defined in Expiration Rule Options.
 - 2.6. **Expiration Rule Options** - Set the rules to apply when a user has reached her/his expiration rule.
 - 2.6.1. **Keep user**, No audit future punch - Keep the user, but do not save the new attendance records.
 - 2.6.2. **Keep User**, And audit future punch - Keep the user and continue to record the attendance records.
 - 2.6.3. **Delete user** - Delete the user from the terminal.
3. **Fingerprint**

Settings for the fingerprint sensor.

 - 3.1. **1:1 Match Threshold** - Evaluates the similarity between the fingerprint and the template for one given user (user gives his/her ID before presenting his/her fingerprint in front of the sensor).
 - 3.2. **1:N Match Threshold** - Evaluates the similarity between the fingerprint and all the enrolled templates (the user clocks in/out only with the fingerprint).
 - 3.3. **FP Sensitivity** - Fingerprint sensitivity setting: the default value is medium, you can change it to 'high' if the machine is installed in a dry environment, you can set it to 'low' if the machine is installed in a humid environment.
 - 3.4. **1:1 Retry Times** - Set the number of retry times when using the 1:1 verification process.
 - 3.5. **Fingerprint algorithm** - You can choose between two fingerprint identification algorithms. By default, the machine uses the version 10.0 of the algorithm. You can set it to the version 9.0 if you want to use your terminal together with previous Safescan TA terminals (TA series 800, or 900). Please note: if you change the algorithm version, you will have to register again all the existing fingerprint templates.
 - 3.6. **Fingerprint Image** - Choose if you want to display the fingerprint image when enrolling a user.
4. **Reset** - Reset all options to factory default and restart the machine
5. **USB Upgrade**

It is possible, if needed, to upgrade the firmware of your terminal with a file on a USB stick.

3.5 PERSONALIZE

Change settings of the system according to your personal preferences.

1. User Interface

- 1.1. **Language** - Select the language of the terminal.
- 1.2. **Lock Power Key** - You can choose to disable the power-off button, to prevent unwanted power off of the terminal. If the option is unchecked, you can switch off the terminal by holding the power button for 3 seconds. If the option is checked, it is not possible to switch off the terminal by pressing the power button.
- 1.3. **Menu Screen Timeout (s)** - The device will return to the main screen if no action is performed during the set amount of time (the function can be disabled, between 60 and 99999 seconds).
- 1.4. **Idle Time to Sleep (m)** - The device will go into sleep mode after the amount of time defined in this option (from 1 to 999 minutes). You can wake up the device by pressing a key or by presenting your finger to the sensor.
- 1.5. **Main Screen Style** - You can choose which information is displayed on the main screen. Style 1 displays the in and out icons and the time and date. Style 2 displays the functions linked to the function keys.

2. Voice

- 2.1. **Voice Prompt** - Choose to enable the sound effects of the machine (the sound that is played during power on and power off).
Please note: this setting does not disable the authentication sound messages.
- 2.2. **Keyboard Prompt** - You can switch on or off the sound played when you press any key on the keyboard.
- 2.3. **Volume** - Adjust the volume of the sounds emitted by your terminal.



3. Bell Schedules

The terminal can play ringtones according to a defined schedule.

- 3.1. **New Bell Schedule** - Add a new scheduled bell.
- 3.2. **Bell Status** - Enable the selected bell
- 3.3. **Bell Time** - Select the time for the bell to ring.
 - 3.2.1. **Repeat** - Select the day(s) for the bell to ring.
 - 3.2.2. **Ring Tone** - Select a ringtone for the bell.
 - 3.2.3. **Internal bell delay (s)** - Specify the playing duration of the bell.
- 3.4. **All Bell Schedules** - Displays a list of all the scheduled bell set in the terminal. It is possible to edit or delete any of these items.

4. Punch State Options

4.1. Punch State Mode

- 4.1.1 **Off**. Any status key (including the **IN**  or **OUT**  keys) becomes unavailable.
- 4.1.2 **Manual Mode** - The status keys are switched manually, the status disappears after the defined time.
- 4.1.3 **Auto Mode** - The terminal switches status automatically at the user-defined times.
- 4.1.4 **Manual and Auto Mode** - The terminal switches status automatically at the user-defined times. It is also possible to switch the status keys
- 4.1.5 **Manually**. The terminal switches back to the automatically defined status after a defined time.
- 4.1.6 **Manual fixed Mode** - The terminal keeps the status defined on a manual switch.
- 4.1.7 **Fixed Mode** - The terminal can only use the status defined in the menu.

- 4.2. **Punch State Timeout (s)** - Specifies the number of seconds a status will be displayed.

- 4.3. **Punch State Required** - Specifies if a status needs to be selected when clocking.

5. **Shortcut Key Mappings** - The function keys of the terminal can be used as shortcuts to many menu items, they can also be used as Punch State Keys for clocking operations.

3.6 DATA MANAGEMENT

Perform terminal data related operations such as deleting, backing-up or restoring data from a previous back-up.

1. Delete Data

- 1.1. **Delete Attendance Data** - You can delete attendance data, choose if you want to delete all data or just the data of a specific period.
- 1.2. **Delete All Data** - Delete all users, clocking data and access control data.
- 1.3. **Delete Access Control** - Delete access control records.
- 1.4. **Delete Admin Role** - Change all administrators to normal users.

2. **Backup Data**. It is possible to create a backup of your terminal either on a USB drive, or on the terminal itself.

- 2.1. **Backup to Device** - You can backup your data directly on a specific memory location of the terminal.

Please Note: you can only store one backup on the device.

- 2.1.1. **Backup Content** - There are two different types of data you can backup: The Business Data, and the System Data.
- 2.1.2. **Backup Notes** - You can add a note to the backup (backup date, backup name etc)
- 2.1.3. **Backup Start** - Start the backup process

- 2.3. **Backup to USB Disk** - You can also backup your data on a USB Stick.

Please Note: If there is already one backup on the USB Stick, it will be overwritten.

3. **Restore Data** - You can restore your terminal data from a previous backup from this menu.

- 3.1. **Restore from Device**. Restore from a backup saved on the device.
- 3.2. **Restore from USB Disk**. Restore from a backup saved on a USB Stick.

3.7 ACCESS CONTROL

All access control related settings

1. Access Control Options

- 1.1. **Door Lock Delay (s).** Set the number of seconds the lock stays unlocked after opening.
- 1.2. **Door Sensor Delay (s).** Set the number of seconds the door can stay open before triggering the alarm. This will only function if a sensor is connected to the terminal.
- 1.2. **Door Sensor Type.** Select the type of sensor to use with the terminal.
- 1.3. **Door Alarm Delay (s).** Set the time before triggering the alarm if an abnormal door sensor state is detected.
- 1.4. **Retry Times to alarm.** Set the number of rejected identifications before triggering the alarm.
- 1.5. **NC Time Period.** Select the time period when the door is always closed.
- 1.6. **NO Time Period.** Select the time period when the door is always open.
2. **Time Schedule.** It is possible to define up to 50 different time schedule (= time period). For each time schedule you can define the time frame when the door can be opened. It is possible to link up to three time schedules to an Access group, or user.
3. **Holidays.** In order to adapt to special holiday schedules, you can link a specific time schedule to a certain period.
 - 3.1. **Add Holidays.** Add a new holiday
 - 3.2. **All Holidays.** Display the list of all holidays.
4. **Access Groups.** Allow management of time zones and the identification methods by groups of employees. By default employees use their group time period settings. When a new user is created, they are linked to access group 1 by default. Users can be assigned to any given group from the user edit screen.
 - 4.1. **New Group.** Create a new group.
 - 4.2. **All Groups.** Display the list of all groups.
5. **Combined Verification.** Define the group(s) allowed to open the door.
6. **Duress Options.** The terminal offers several ways of triggering an alarm if an employee has to open the door under duress (= being unwillingly forced to open the door).
 - 6.1. **Duress Function.** When enabled, pressing the "Duress Key" before clocking will open the door and trigger the alarm. The "Duress Key" can be linked to any function key of the device.
 - 6.2. **Alarm on 1:1 Match.** The alarm will be triggered every time a user uses the 1:1 Match authentication process.
 - 6.3. **Alarm on 1:N Match.** The alarm will be triggered every time a user uses the 1:N Match authentication process.
 - 6.4. **Alarm on Password.** The alarm will be triggered every time a user uses the password authentication process.
 - 6.5. **Alarm Delay (s).** Set the delay before the alarm is fired.

3.8 USB MANAGER

If you can not, or do not want to use a network connection to communicate with the PC software, the terminal allows you to retrieve or send the data via a USB drive.

1. **Download.** Send the data **from the terminal** to the USB Stick.
 - 1.1. **Attendance Data** - The clocking data.
 - 1.2. **User Data** - All user related information.
 - 1.3. **Short Message**
2. **Upload.** Send the data from the USB drive **to the terminal**.
 - 2.1. **User Data** - Upload user data after editing in the software.
 - 2.2. **Short Message**
 - 2.3. **Screen Saver**
 - 2.4. **Wallpaper**
3. **Download Options**
 - 3.1. **Delete ATT Data**

3.9 ATTENDANCE SEARCH

If you do not have access to the Safescan TA PC software, it is always possible to check the attendance logs directly on the terminal. Enter the ID of the user of whom you want to check the data. If you do not provide a user ID, the system will display the clocking data of all users.

3.10 SHORT MESSAGE

You can display short messages to the users directly on the terminal screen. These messages can be displayed to one or several chosen users, or to everyone.

1. **New Message** - Create a new message.
 - 1.1. **Message** - Type the text of the message.
 - 1.2. **Start Date** - Define the date upon which the message will be displayed from.
 - 1.3. **Start time** - Define the time upon which the message will be displayed to.
 - 1.4. **Expired Time (m)** - Define for how long the message will be available for consultation.
 - 1.5. **Message Type** - Define the type of the message.
 - 1.5.1. **Public** - A public message will be displayed to everyone clocking on the terminal.
 - 1.5.2. **Personal** - A personal message will be displayed to one or several chosen user(s).
 - 1.5.3. **Draft** - Choose draft when you want the message to be stored in the terminal's memory, but not displayed yet.

2. **Public Messages** - Displays a list of all public messages stored in the terminal. These messages can be viewed, edited, or deleted.
3. **Personal Messages** - Displays a list of all personal messages stored in the terminal. These messages can be viewed, edited, or deleted.
4. **Drafts Messages** - Displays a list of all draft messages stored in the terminal. These messages can be viewed, edited, or deleted.
5. **Message Option**
 - 5.1. **Message Show Delay (s)** - Select the amount of time a message is displayed.

3.11 WORK CODE

Work codes (can also be referred to as function codes) can be used to track special activities / events during working hours. You can link a clocking to a work code.

1. **New Work Code** - Define an ID and a name for a new work code.
2. **All Work Codes** - List of all the work codes present in the terminal. It is possible to edit the name of a specific work code, or to delete it from the terminal.
3. **Work Code Options**
 - 3.1. **Work Code Required** - When enabled, users will be prompted to select a work code every time they clock in/out.
 - 3.2. **Work Code Must Defined** - When enabled, users have to select a work code from the existing work codes list. If not, it is possible to enter a number, even if this number does match any work code ID in the work code list.

3.12 AUTOTEST

Various tests to verify if the terminal is working properly.

1. **Test All**. Run all the tests.
2. **Test Test LCD**. Test LCD display.
3. **Test voice**. Test speaker.
4. **Test Keyboard**. Test the keyboard.
5. **Test Fingerprint Sensor**. Test the fingerprint sensor.
6. **Test Clock RTC**. Test the device clock.

3.13 SYSTEM INFO

Information about the terminal.

1. **Device Capacity** - Number of enrolled users, administrators, passwords, fingerprint templates, RFID cards, and attendance logs.
2. **Device Info** - Various information of the device, including the serial number, the fingerprint algorithm, and the MAC address.
3. **Firmware Info** - Version numbers of the various services running on the terminal.

3.14 USE OF BIOMETRIC DATA


The system used by Safescan does not store any image of the fingerprint, but only an anonymous, mathematical reference template. The personal features of the fingertip are vectorised in unique points and converted by the terminal into a complex numerical code, using a special algorithm. The corresponding employee number is then linked to this value. The fingerprint image can never be reproduced by the terminal or exported from the terminal – only the numerical code is stored. Misuse of personal data by unauthorised persons is thereby avoided.

Since all Safescan TA terminals offer a dual authentication option, in case your employee(s) have any concerns with clocking by fingerprint, there is always the option for the employee to choose their own 8-digit PIN code and identify themselves with this code to the terminal.


Safescan, as the device supplier, shall not be held legally accountable, directly or indirectly, for any consequences arising due to the use of our products. For any conflict regarding privacy when using our products, please contact your employer directly.

PLEASE NOTE: ALWAYS USE A QUALIFIED ENGINEER TO INSTALL DOOR ACCESS CONTROL ON THE TA TERMINAL

1. Share power with the lock

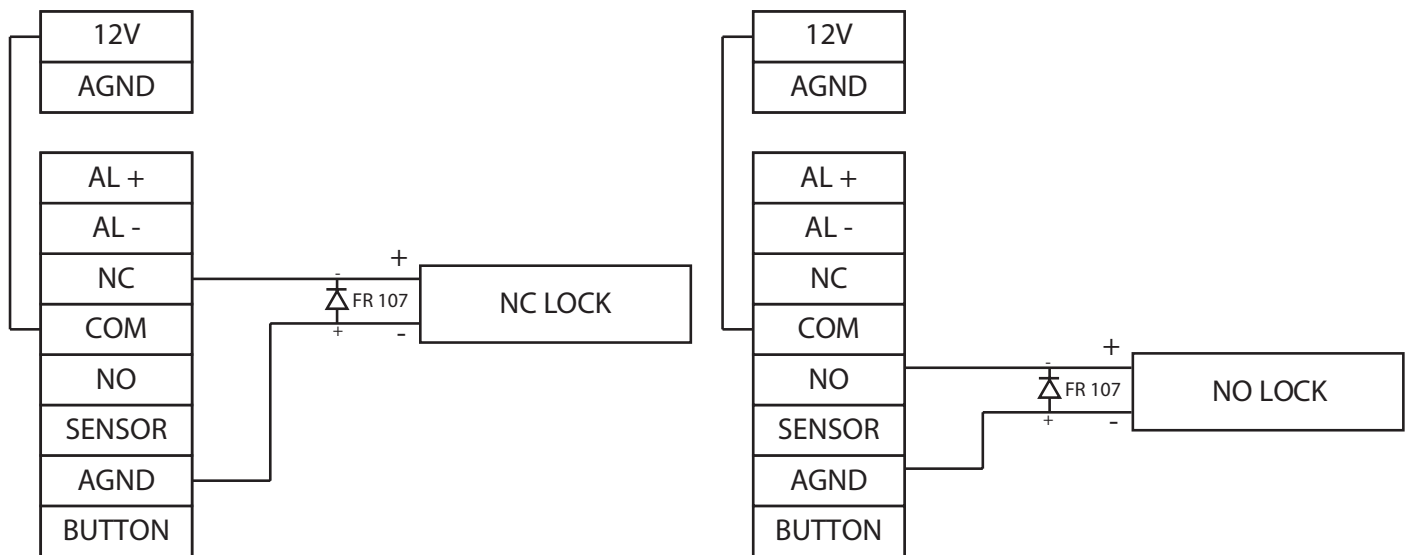

2. Do not share power with the lock

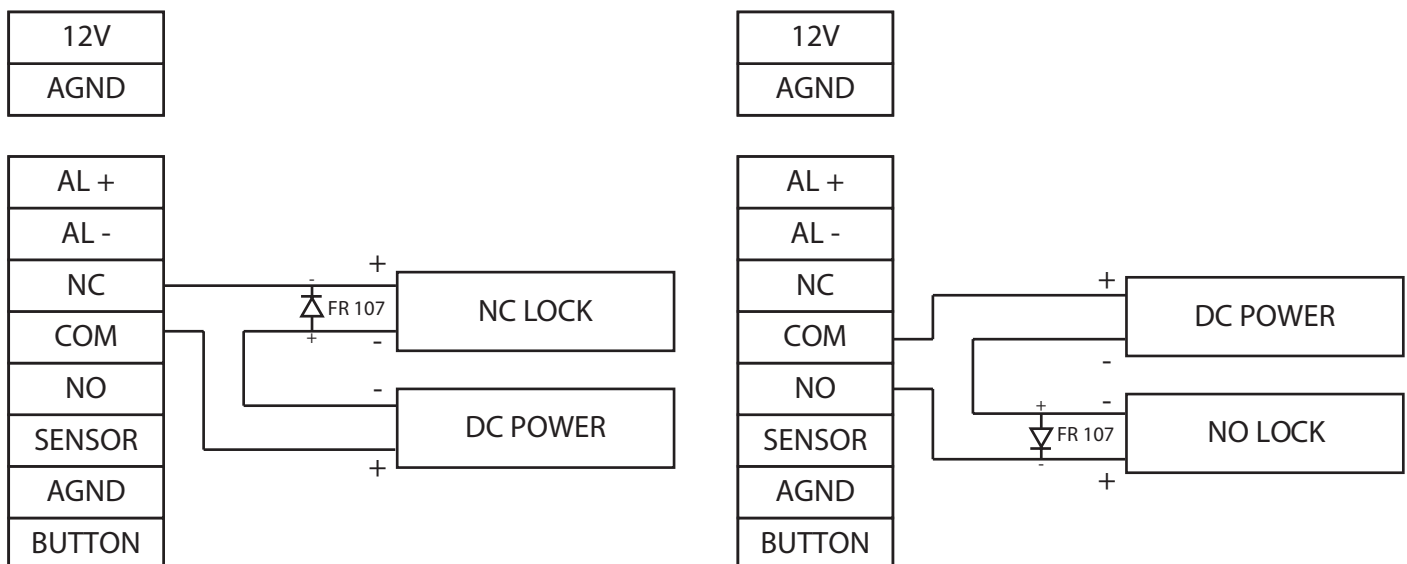

3. Other connections

